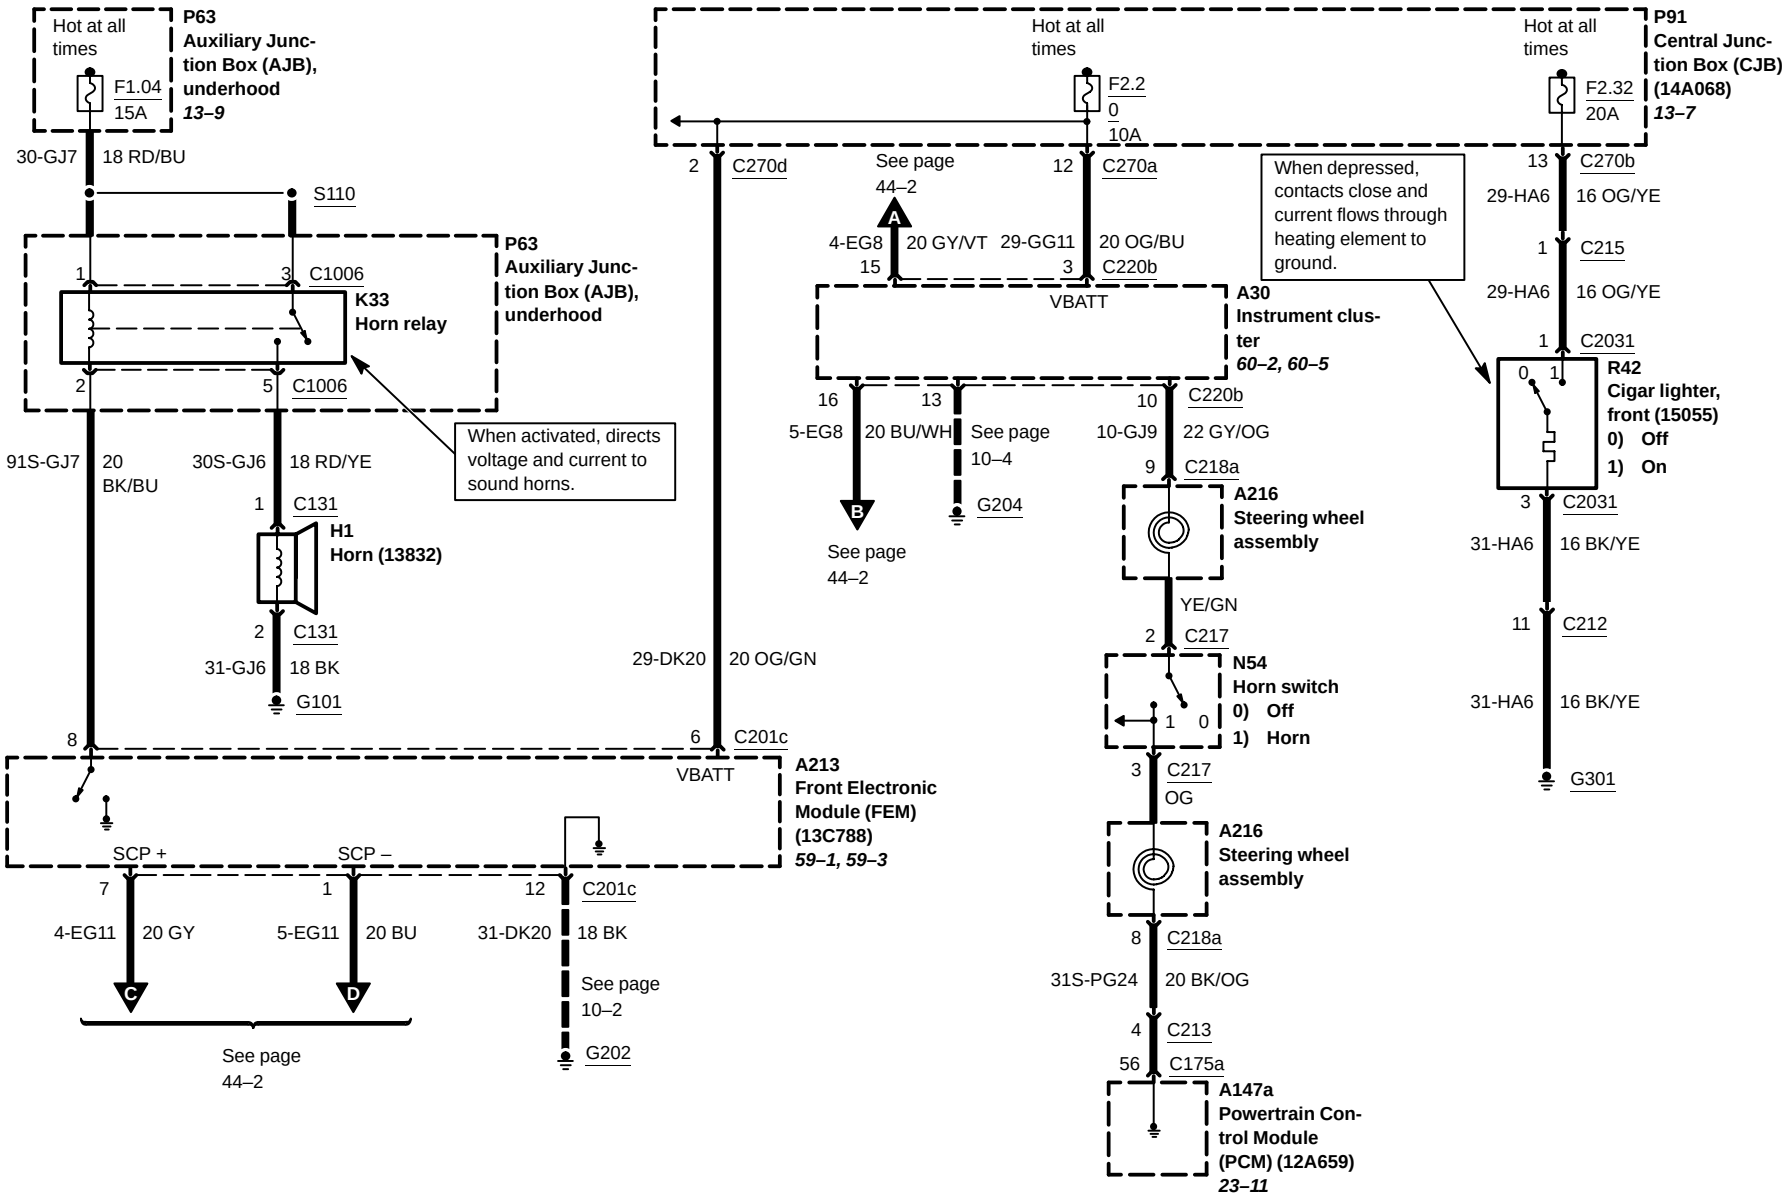
Hot at all times
F1.04
15A
P63 Auxiliary Junction Box (AJB), underhood 13–9
30-GJ7 18 RD/BU
S110
P63 Auxiliary Junction Box (AJB), underhood
1
3 C1006
K33 Horn relay
2
5 C1006
When activated, directs voltage and current to sound horns.
91S-GJ7 20 BK/BU
30S-GJ6 18 RD/YE
1 C131
H1 Horn (13832)
2 C131
31-GJ6 18 BK
G101
8
6 C201c
VBATT
A213 Front Electronic Module (FEM) (13C788) 59–1, 59–3
SCP +
SCP –
7
1
12 C201c
4-EG11 20 GY
5-EG11 20 BU
31-DK20 18 BK
See page 10–2
G202
C
D
See page 44–2
Hot at all times
F2.2
0
10A
2 C270d
See page 44–2
12 C270a
A
4-EG8 15
20 GY/VT
29-GG11 3
20 OG/BU
C220b
VBATT
A30 Instrument cluster 60–2, 60–5
16
13
10 C220b
5-EG8 20 BU/WH
See page 10–4
10-GJ9 22 GY/OG
B
G204
See page 44–2
9 C218a
A216 Steering wheel assembly
YE/GN
2 C217
N54 Horn switch
0) Off
1) Horn
1 0
3 C217
OG
A216 Steering wheel assembly
8 C218a
31S-PG24 20 BK/OG
4 C213
56 C175a
A147a Powertrain Control Module (PCM) (12A659) 23–11
29-DK20 20 OG/GN
When depressed, contacts close and current flows through heating element to ground.
Hot at all times
F2.32
20A
P91 Central Junction Box (CJB) (14A068) 13–7
13 C270b
29-HA6 16 OG/YE
1 C215
29-HA6 16 OG/YE
1 C2031
0 1
R42 Cigar lighter, front (15055)
0) Off
1) On
3 C2031
31-HA6 16 BK/YE
11 C212
31-HA6 16 BK/YE
G301