C375 (BK)

18B604

M69
Recirculation air actuator

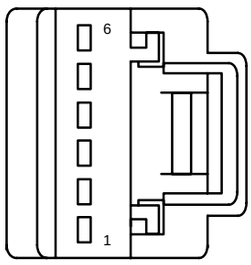

F06128

Pin	Circuit	Circuit Function
1	32-FA76 (WH/BU)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	91-FA76 (BK/OG)	Ground
4	91S-FA90 (BK/GN)	Ground, switched
5	–	not used
6	33-FA76 (YE/BU)	Switched between: Battery voltage, Ground or Open

C376 (GY)

14401



F03032

Pin	Circuit	Circuit Function
1	91-FA20 (BK/YE)	Ground
2	–	not used
3	91S-FA20 (BK/YE)	Ground, switched

C380 (BK)

14401

A128
Heater control module

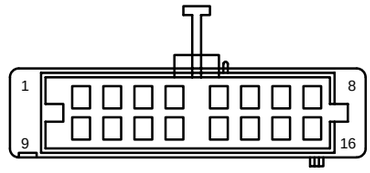

F16017

Pin	Circuit	Circuit Function
1	31S-HB31 (BK/OG)	Ground, switched
2	29S-LE10 (OG/GN)	Voltage supplied at all times (overload protected), switched
3	31S-HB1 (BK/BU)	Ground, switched
4	91S-FA90 (BN/GN)	Ground, switched
5	–	not used
6	31S-FA26 (BK/RD)	Ground, switched
7	91S-FA20 (BK/YE)	Ground, switched
8	29-FA13 (OG)	Voltage supplied at all times (overload protected)
9	15S-FA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	15-FA13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
11	–	not used
12	91-FA13 (BN/OG)	Ground
13	–	not used
14	32-FA76 (WH/BU)	Switched between: Battery voltage, Ground or Open
15	–	not used
16	33-FA76 (YE/BU)	Switched between: Battery voltage, Ground or Open