C365

14A699

N31
Seat back heater, left front

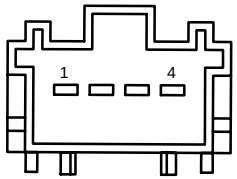

F04287

Pin	Circuit	Circuit Function
1	1066 (GY/LB)	Seat back heater, driver side, feed
2	1062 (RD/LB)	Seat back heater, driver side, Sensor, return
3	1063 (OG/LB)	Heated seat module, driver side front
4	1067 (VT/LB)	Seat back heater, driver side, heater, return

C366

14A699

M231
Driver seat lumbar compressor motor (65500)



F02235

Pin	Circuit	Circuit Function
1	1097 (BR)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor

C367 (BN)

14B720

A155
Side air bag module, left

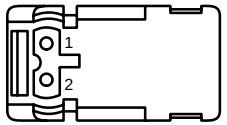

F02215

Pin	Circuit	Circuit Function
1	1258 (BN/LB)	Air bag – driver side impact – to module – return
2	1257 (WH/LB)	Air bag – driver side impact – to module – feed

C368a

14A699

M230
Driver seat backrest motor

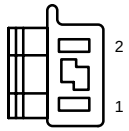

F02071

Pin	Circuit	Circuit Function
1	919 (GY/BK)	Driver seat backrest motor
2	918 (GY)	Driver seat backrest motor

C368b

14A699

M230
Driver seat backrest motor

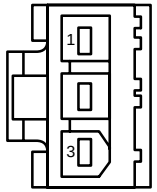

F03111

Pin	Circuit	Circuit Function
1	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
2	445 (OG/LB)	Backrest forward/rearward sensor
3	447 (OG/R)	Sensor, return, from, Driver seat module (14C718)

C380

14A318

N251
Power point (19N236)

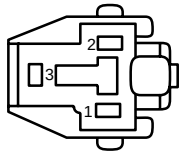

F03163

Pin	Circuit	Circuit Function
1	1049 (BN/PK)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground