C4063

14A005

K366
Convertible top raise relay

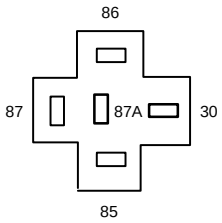

F05141

Pin	Circuit	Circuit Function
30	33-AG14 (YE)	Switched between: Battery voltage, Ground or Open
85	8-AG16 (WH/BU)	Sensor signal
86	30-AG16 (RD/OG)	Voltage supplied at all times (not overload protected)
87	30-AG17 (RD/GN)	Voltage supplied at all times (not overload protected)
87A	31-AG2 (BK/BU)	Ground

C4064

14A005

K367
Convertible top lower relay

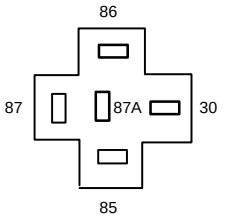

F05141

Pin	Circuit	Circuit Function
30	32-AG14 (WH)	Switched between: Battery voltage, Ground or Open
85	10-AG24 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
86	30-AG16 (RD/OG)	Voltage supplied at all times (not overload protected)
	30-AG24 (RD/GN)	
87	30-AG25 (RD/BK)	Voltage supplied at all times (not overload protected)
87A	31-AG24 (BK/GN)	Ground

C4065

14A005

O22
Circuit breaker



F02445

Pin	Circuit	Circuit Function
1	30-AG1 (RD/BU)	Voltage supplied at all times (not overload protected)
2	30-AG2 (RD/BU)	Voltage supplied at all times (not overload protected)