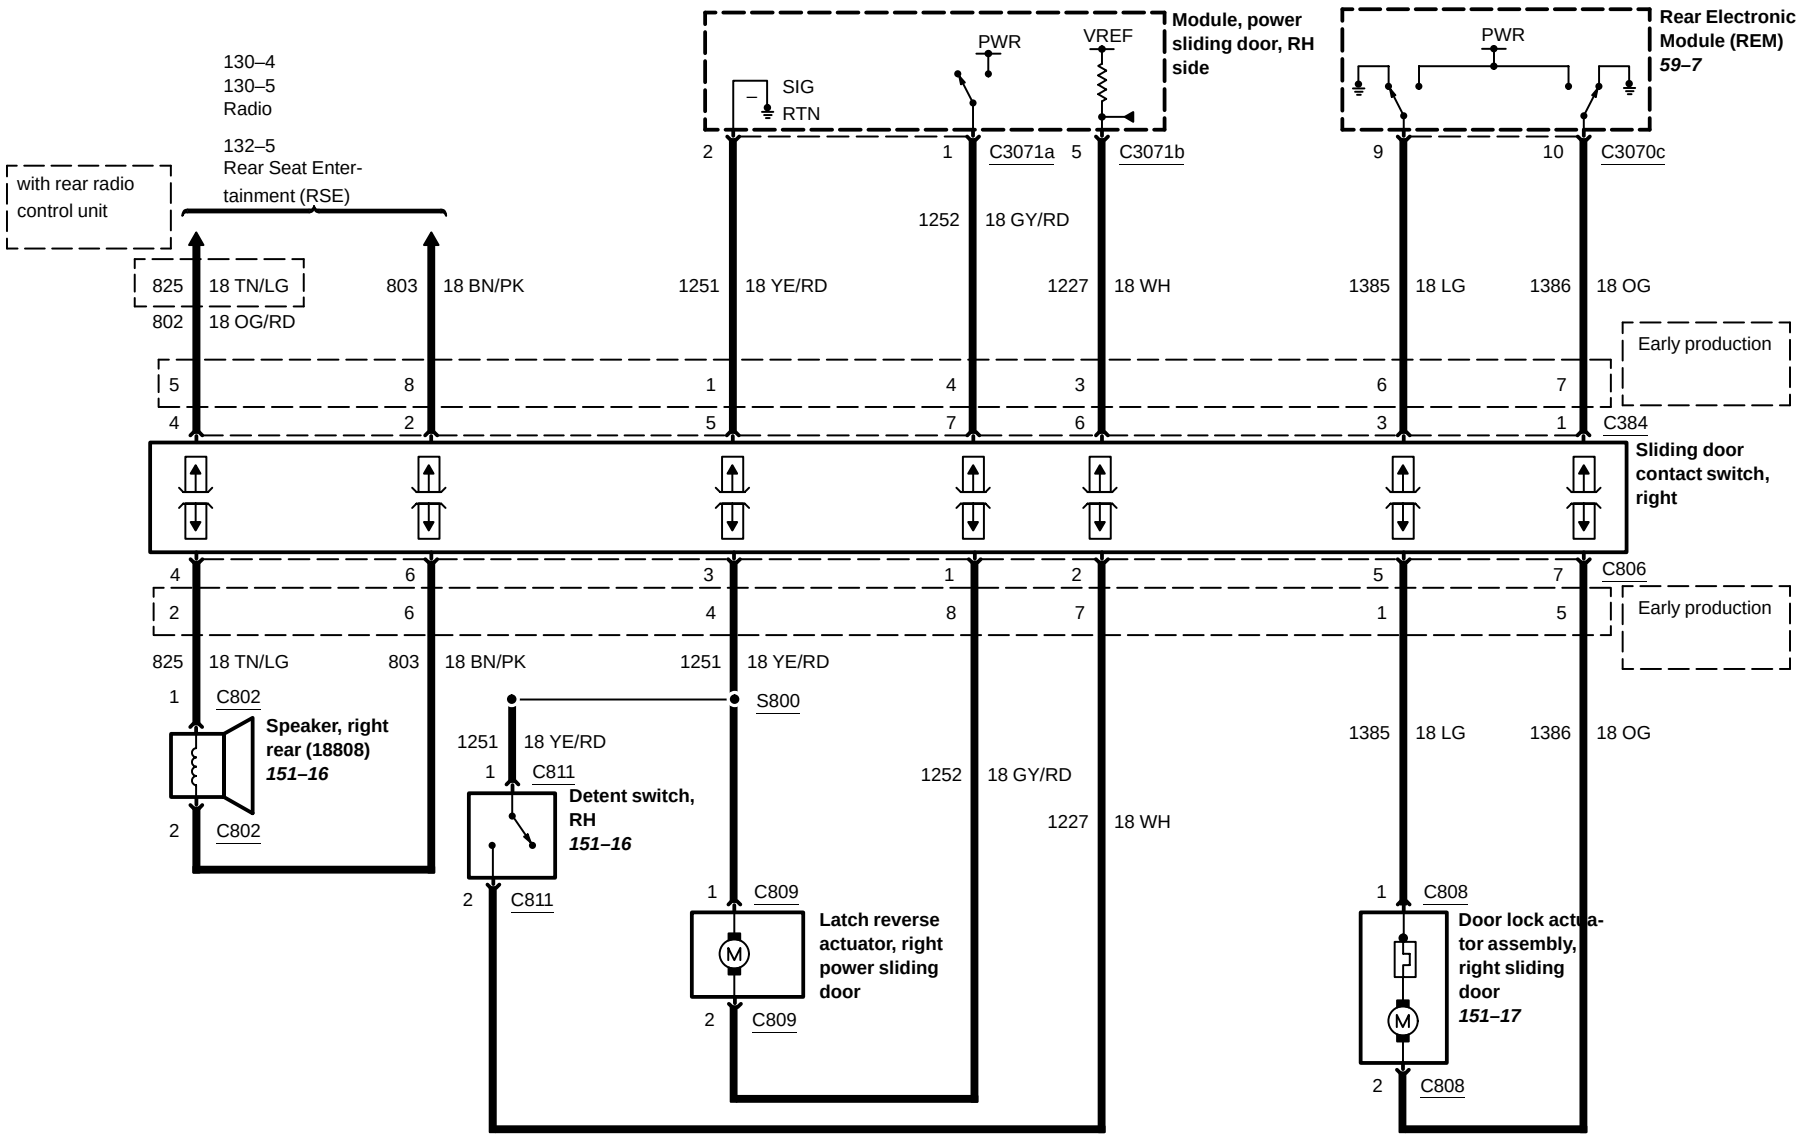
130–4
130–5
Radio
132–5
Rear Seat Entertainment (RSE)
with rear radio control unit
Module, power sliding door, RH side
SIG
RTN
PWR
VREF
C3071a
C3071b
Rear Electronic Module (REM) 59–7
C3070c
825 18 TN/LG
802 18 OG/RD
803 18 BN/PK
1251 18 YE/RD
1252 18 GY/RD
1227 18 WH
1385 18 LG
1386 18 OG
Early production
C384
Sliding door contact switch, right
C806
C802
Speaker, right rear (18808) 151–16
S800
C811
Detent switch, RH 151–16
C809
Latch reverse actuator, right power sliding door
C808
Door lock actuator assembly, right sliding door 151–17