C3015

14A005

M215
Power seat motor
assembly, right

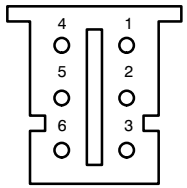

F06089

Pin	Circuit	Circuit function
1	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
2	989 (RD/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
3	988 (YE/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
4	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
5	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
6	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor

C3028

14405

A144
CD changer
(18D806)

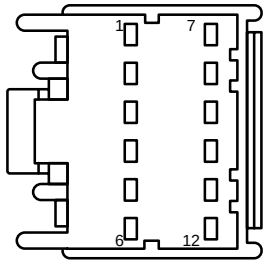

F12103

Pin	Circuit	Circuit function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	Radio (18806), to CD changer, Left +
6	690 (GY)	Radio (18806), to CD changer, Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	828 (VT/LB)	Voltage supplied at all times (overload protected)
10	48	Shield
11	798 (LG/RD)	Radio (18806), to CD changer, Left –
12	799 (OG/BK)	Radio (18806), to CD changer, Right –