## C511

**14A005**

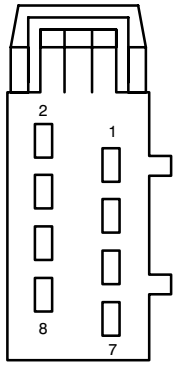


F08112

**14323**

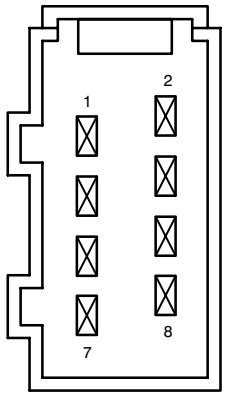


F08114

(1) 1020 (DG/VT)
(2)
(3) 964 (DB/LG)
(4)
(5) 1019 (TN/LB)
(6) 1255 (WH/RD)
(7) 1018 (LG/OG)
(8) 57 (BK)

## C512

**14631**

Fuel door release switch




F02071

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 482 (WH/PK) | Fuel door release solenoid, control |
| 2 | 84 (VT/YE) | Voltage supplied at all times (overload protected) |

* with memory

## C516a

**14A005**

Exterior rear view mirror, left

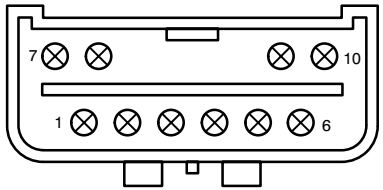


F10025

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 59 (DG/VT) | Fused rear window defrost relay, switched power |
| 3 | *540 (RD) | Left mirror – Right |
| | 945 (YE/BK) | |
| 4 | *947 (YE/RD) | Left mirror – Left |
| | 942 (RD/OG) | |
| 5 | *948 (YE/LB) | Left mirror – Down |
| | 945 (YE/BK) | |
| 6 | *541 (DB) | Left mirror – Up |
| | 940 (DB/OG) | |
| 7 | – | not used |
| 8 | – | not used |
| 9 | 47 (LB/WH) | Electrochromatic inside mirror unit (17700) |
| 10 | 46 (VT) | Electrochromatic inside mirror unit (17700) |