C605

14630

N205
Door lock switch, passenger side (14028)

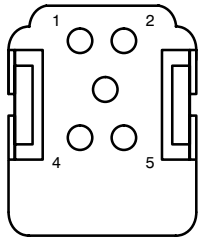

F05013

Pin	Circuit	Circuit function
1	120 (PK/LG)	Door unlock relay, control
2	–	not used
3	57 (BK)	Ground
4	–	not used
5	119 (PK/YE)	Door lock relay, control

C608

14630

M79
Power window motor, passenger side front (23394)



F02073

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down

C612

19A041/14630

Y18
Speaker, right front (18808)

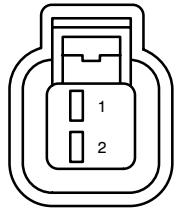

F02069

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –

C622

14630

M260
Exterior rear view mirror, right

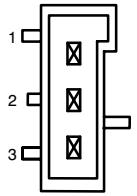

F03157

Pin	Circuit	Circuit function
1	543 (DG)	Voltage supplied at all times (overload protected)
2	544 (VT)	Up/Down mirror movement
3	945 (YE/BK)	Mirror motor, feed

C702

14334/19A044/13A724

Y17
Speaker, left rear (18808)

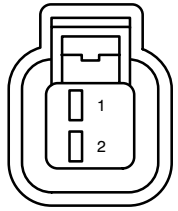

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –