## Early build

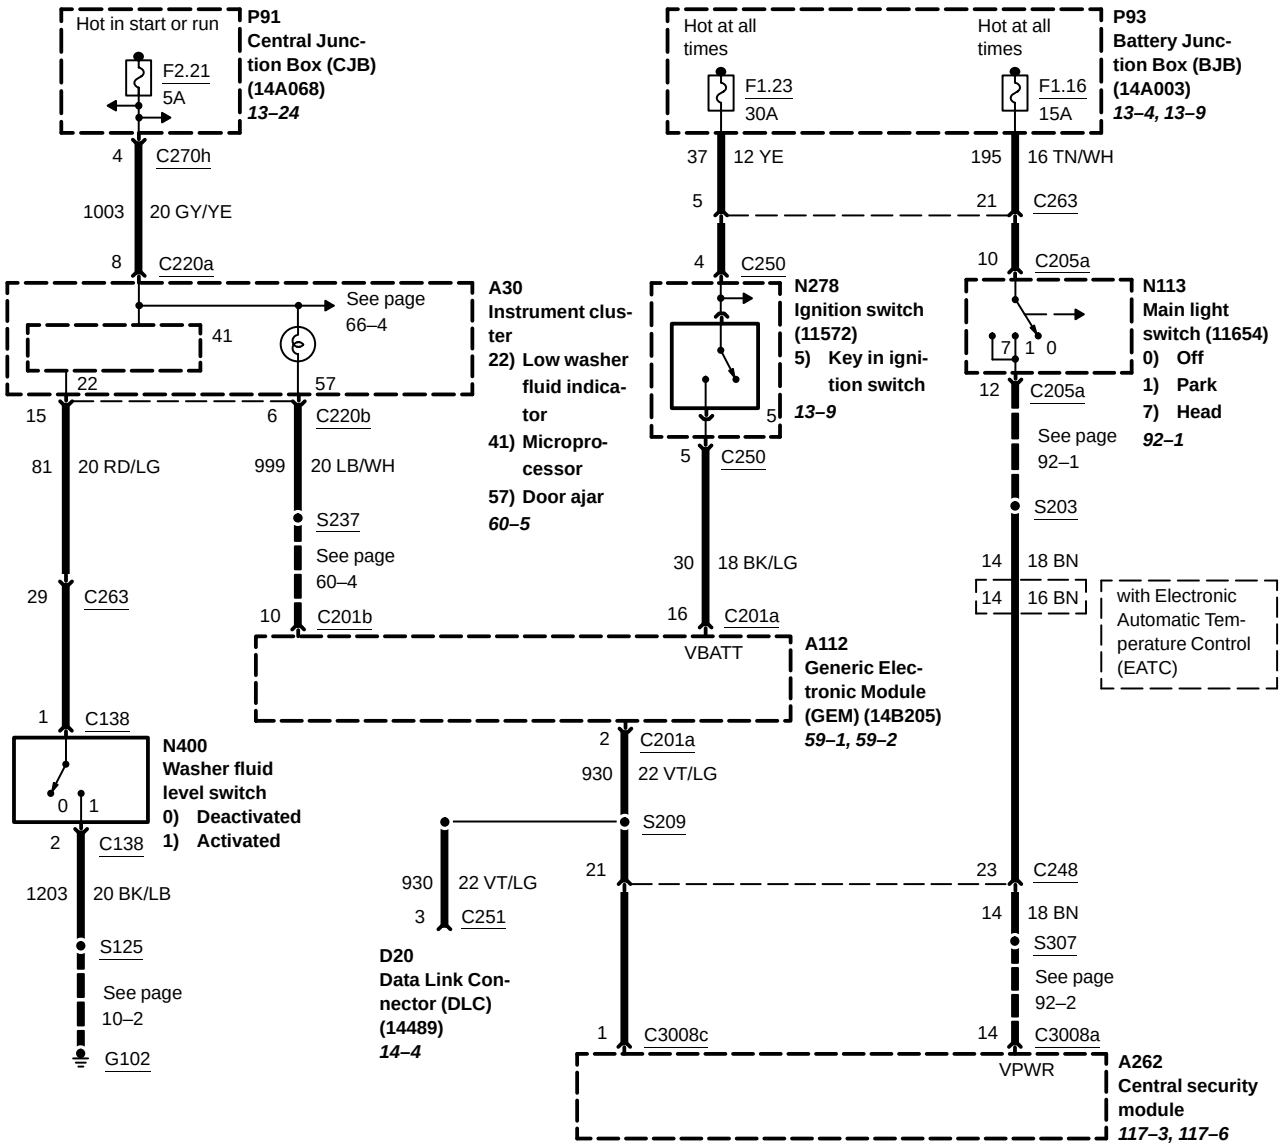
Hot in start or run
P91
Central Junction Box (CJB)
(14A068)
13–24
F2.21
5A
4
C270h
1003
20 GY/YE
8
C220a
See page 66–4
A30
Instrument cluster
22) Low washer fluid indicator
41) Microprocessor
57) Door ajar
60–5
41
22
57
15
6
C220b
81
20 RD/LG
999
20 LB/WH
S237
See page 60–4
29
C263
10
C201b
1
C138
N400
Washer fluid level switch
0) Deactivated
1) Activated
0
1
2
C138
1203
20 BK/LB
S125
See page 10–2
G102
Hot at all times
F1.23
30A
Hot at all times
F1.16
15A
P93
Battery Junction Box (BJB)
(14A003)
13–4, 13–9
37
12 YE
195
16 TN/WH
5
21
C263
4
C250
10
C205a
N278
Ignition switch (11572)
5) Key in ignition switch
13–9
5
C250
30
18 BK/LG
16
C201a
VBATT
N113
Main light switch (11654)
0) Off
1) Park
7) Head
92–1
7
1
0
12
C205a
See page 92–1
S203
14
18 BN
14
16 BN
with Electronic Automatic Temperature Control (EATC)
A112
Generic Electronic Module (GEM) (14B205)
59–1, 59–2
2
C201a
930
22 VT/LG
S209
930
22 VT/LG
3
C251
D20
Data Link Connector (DLC)
(14489)
14–4
21
23
C248
14
18 BN
S307
See page 92–2
1
C3008c
14
C3008a
VPWR
A262
Central security module
117–3, 117–6