C110 (BK)

12A654

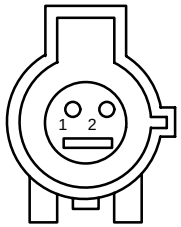

F02078

12B637

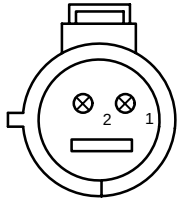

F02072

(1) 1102 (YE/LG)

(2) 359 (GY/RD)

C111

12B637

Coil On Plug
(COP) 1
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1024 (LG/WH)	Coil On Plug (COP) 1 (12029), control

C112

12B637

Coil On Plug
(COP) 2
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1026 (PK/WH)	Coil On Plug (COP) 2 (12029), control

C113

12B637

Coil On Plug
(COP) 3
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1028 (WH/PK)	Coil On Plug (COP) 3 (12029), control

C114

12B637

Coil On Plug
(COP) 4
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1030 (DG/VT)	Coil On Plug (COP) 4 (12029), control

C115

12B637

Coil On Plug
(COP) 5
(12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1021 (LG/YE)	Coil On Plug (COP) 5 (12029), control