C3159a

14A699

B287
Occupant Classification Sensor (OCS)

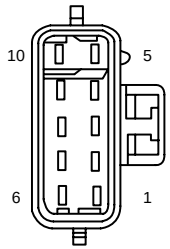

Pin	Circuit	Circuit function
1	1570 (TN/BK)	Seat weight sensor, passenger, to, Occupant classification sensor module
2	1568 (RD/WH)	Seat weight sensor, passenger, to, Occupant classification sensor module
3	1569 (GY/LB)	Seat weight sensor, passenger, to, Occupant classification sensor module
4	964 (DB/LG)	Voltage supplied in Start and Run (overload protected)
5	1556 (DG/VT)	Seat weight sensor, passenger, feed
6	–	not used
7	–	not used
8	–	not used
9	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
10	1557 (DB/OG)	Seat weight sensor, passenger, return

C3159b

14A699

B287
Occupant Classification Sensor (OCS)



F03285

Pin	Circuit	Circuit function
1	1568 (RD/WH)	Seat weight sensor, passenger, to, Occupant classification sensor module
2	1570 (TN/BK)	Seat weight sensor, passenger, to, Occupant classification sensor module
3	1569 (GY/LB)	Seat weight sensor, passenger, to, Occupant classification sensor module

C4043

14A411

B161
Air suspension height sensor (3C131)

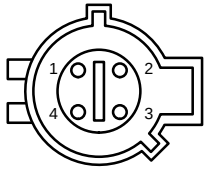

F04075

Pin	Circuit	Circuit function
1	429 (VT/LG)	Air suspension height sensor (3C131), rear, feed
2	428 (OG/BK)	Powertrain Control Module (PCM) (12A650), to, Air suspension module (3C142), signal
3	432 (BK/PK)	Air suspension module (3C142), Ground
4	427 (PK/BK)	Air suspension module (3C142)

C4044

14A411

Y117
Shock absorber solenoid valve, left rear (5A891)

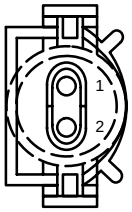

F02031

Pin	Circuit	Circuit function
1	1114 (TN/WH)	Air suspension module (3C142), to, Left, rear, Solenoid
2	1053 (LB/PK)	Voltage supplied at all times (overload protected)

C4045

14A411

Y117
Shock absorber solenoid valve, left rear (5A891)

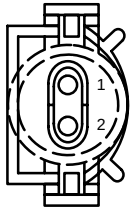

F02031

Pin	Circuit	Circuit function
1	1115 (TN/WH)	Air suspension module (3C142), to, Right, rear, Solenoid
2	1053 (LB/PK)	Voltage supplied at all times (overload protected)