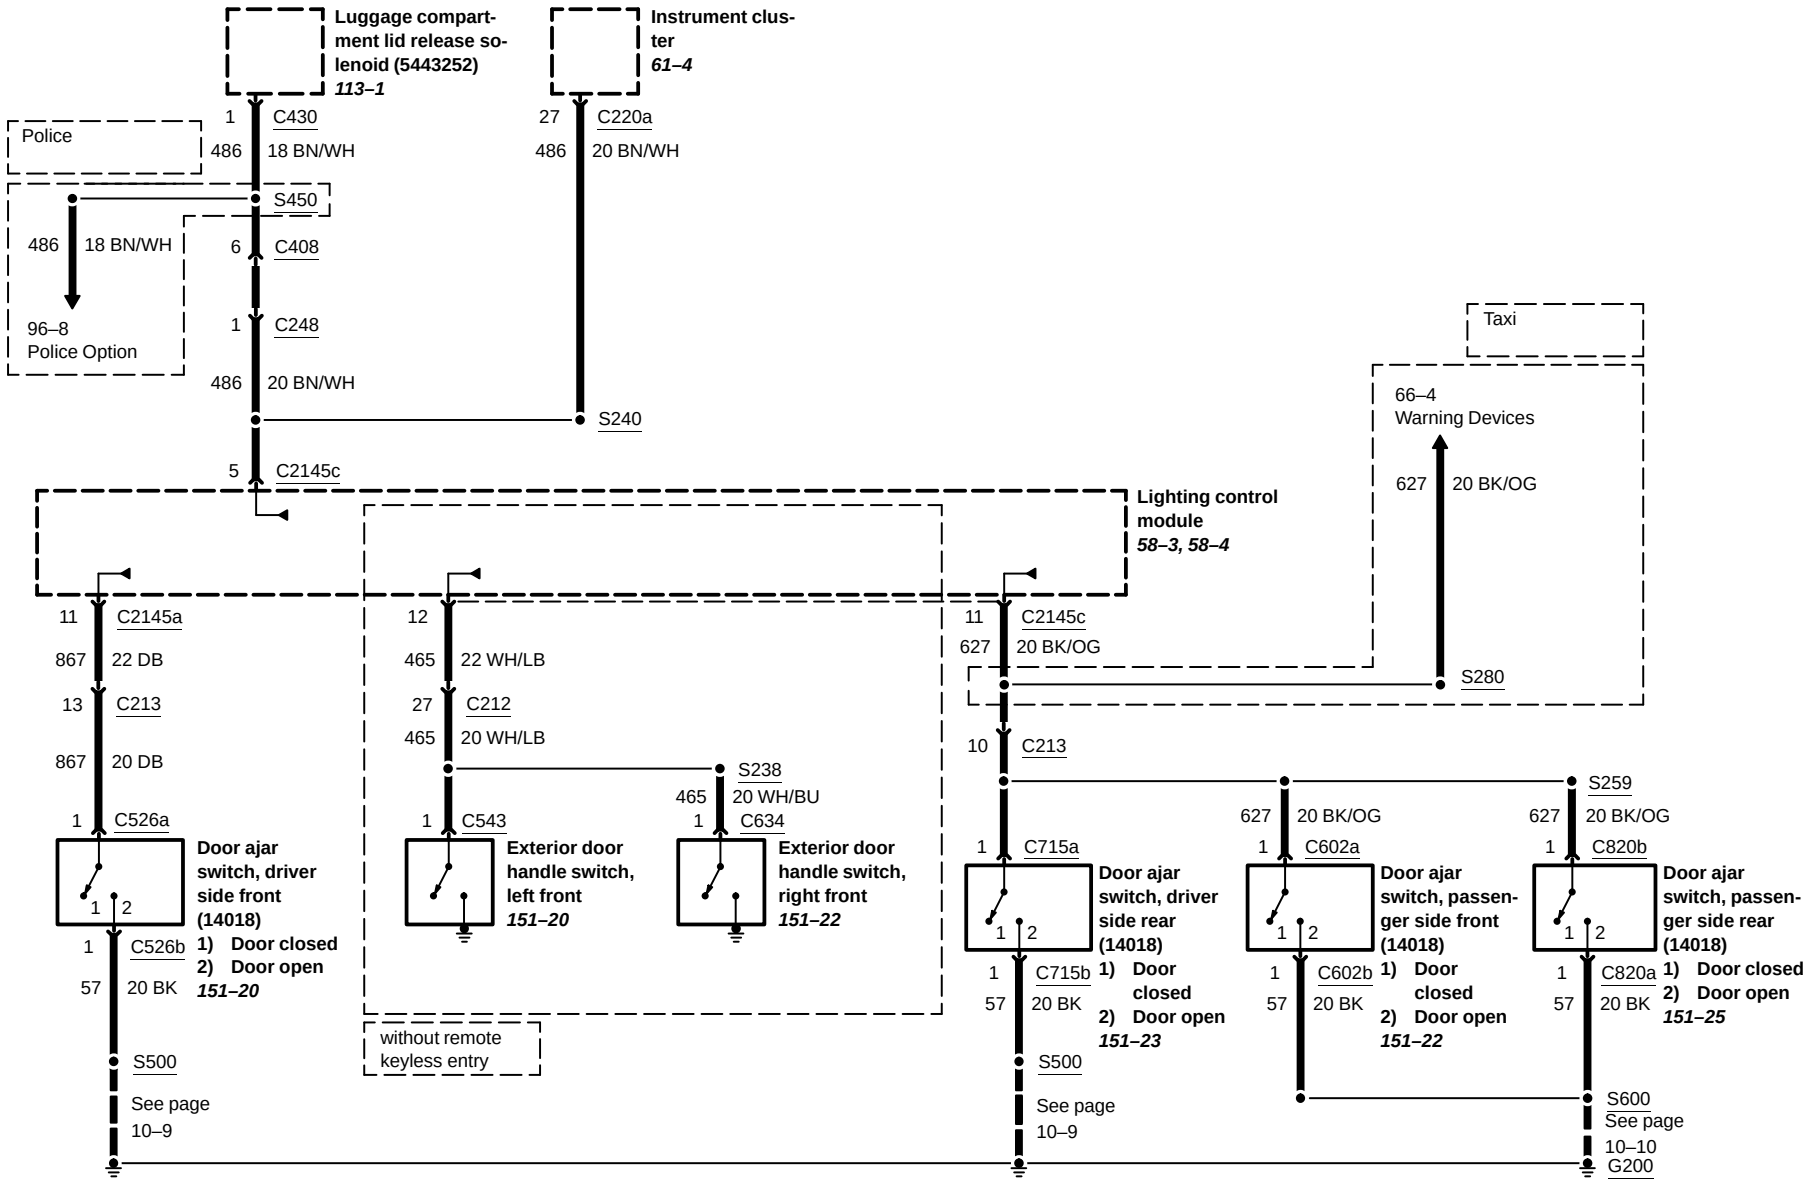
Luggage compartment lid release solenoid (5443252)
113–1
Instrument cluster
61–4
1 C430
486 18 BN/WH
27 C220a
486 20 BN/WH
Police
S450
486 18 BN/WH
6 C408
96–8
Police Option
1 C248
486 20 BN/WH
S240
5 C2145c
Taxi
66–4
Warning Devices
627 20 BK/OG
S280
Lighting control module
58–3, 58–4
11 C2145a
867 22 DB
13 C213
867 20 DB
1 C526a
Door ajar switch, driver side front (14018)
1) Door closed
2) Door open
151–20
1 C526b
57 20 BK
S500
See page 10–9
12
465 22 WH/LB
27 C212
465 20 WH/LB
S238
465 20 WH/BU
1 C543
Exterior door handle switch, left front
151–20
1 C634
Exterior door handle switch, right front
151–22
without remote keyless entry
11 C2145c
627 20 BK/OG
10 C213
1 C715a
Door ajar switch, driver side rear (14018)
1) Door closed
2) Door open
151–23
1 C715b
57 20 BK
S500
See page 10–9
627 20 BK/OG
1 C602a
Door ajar switch, passenger side front (14018)
1) Door closed
2) Door open
151–22
1 C602b
57 20 BK
627 20 BK/OG
S259
1 C820b
Door ajar switch, passenger side rear (14018)
1) Door closed
2) Door open
151–25
1 C820a
57 20 BK
S600
See page 10–10
G200