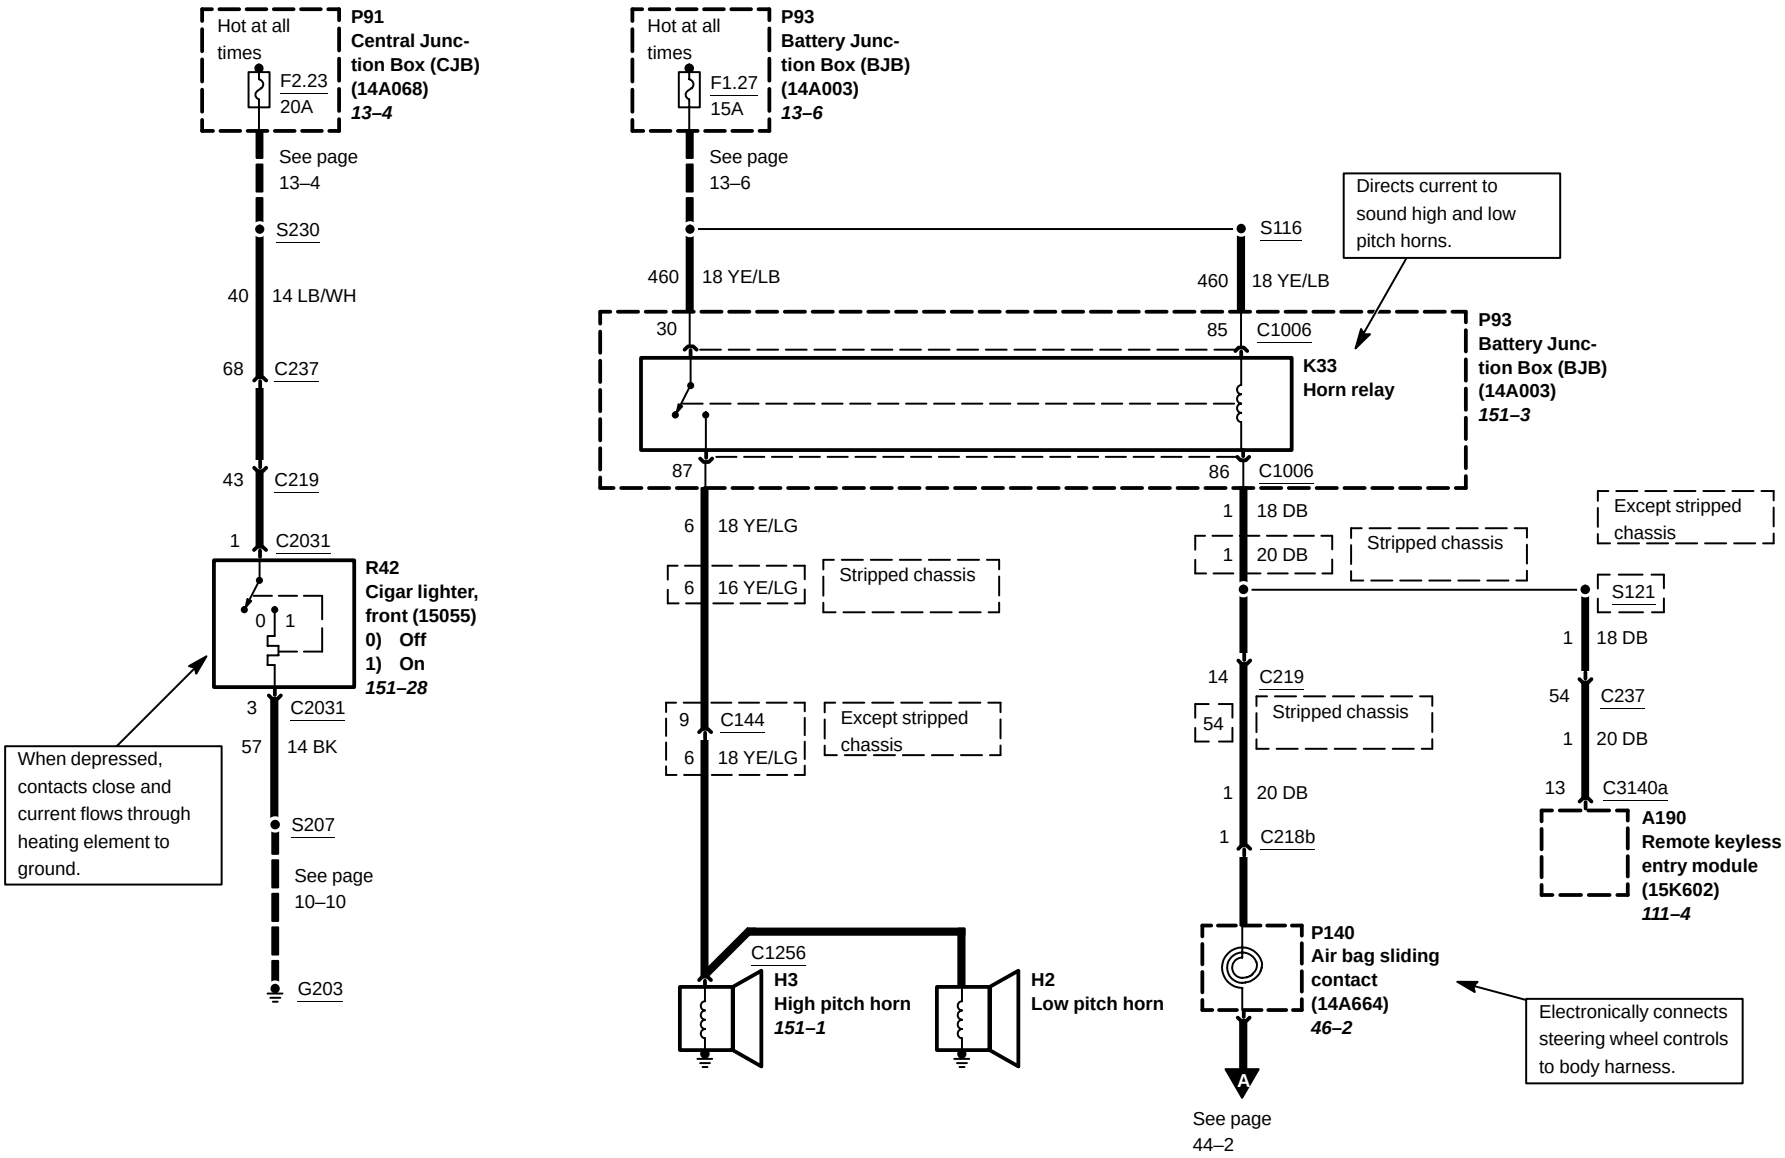
Hot at all times
F2.23
20A
P91
Central Junction Box (CJB)
(14A068)
13–4
See page 13–4
S230
40
14 LB/WH
68
C237
43
C219
1
C2031
R42
Cigar lighter, front (15055)
0) Off
1) On
151–28
0
1
3
C2031
57
14 BK
S207
See page 10–10
G203
When depressed, contacts close and current flows through heating element to ground.
Hot at all times
F1.27
15A
P93
Battery Junction Box (BJB)
(14A003)
13–6
See page 13–6
460
18 YE/LB
S116
460
18 YE/LB
Directs current to sound high and low pitch horns.
30
85
C1006
K33
Horn relay
P93
Battery Junction Box (BJB)
(14A003)
151–3
87
86
C1006
6
18 YE/LG
6
16 YE/LG
Stripped chassis
1
18 DB
1
20 DB
Stripped chassis
Except stripped chassis
S121
1
18 DB
9
C144
6
18 YE/LG
Except stripped chassis
14
C219
54
Stripped chassis
54
C237
1
20 DB
1
20 DB
13
C3140a
A190
Remote keyless entry module
(15K602)
111–4
1
C218b
C1256
H3
High pitch horn
151–1
H2
Low pitch horn
P140
Air bag sliding contact
(14A664)
46–2
Electronically connects steering wheel controls to body harness.
A
See page 44–2