C270d

14401

P91
Central Junction
Box (CJB) (14A068)

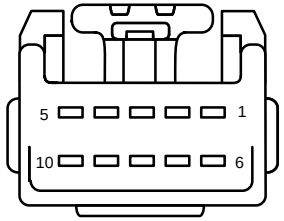

F10091

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage in Run (overload protected)
2	1001 (WH/YE)	Voltage supplied at all times (overload protected)
3	1112 (WH/LB)	Passenger Air bag Deactivation (PAD) switch, input
4	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
5	797 (LG/VT)	Voltage supplied at all times (overload protected)
6	1049 (BN/PK)	Power point, instrument panel (19N236), feed
7	37 (YE)	Voltage supplied at all times (overload protected)
8	298 (VT/OG)	Voltage in Run (overload protected)
9	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
10	40 (LB/WH)	Voltage supplied at all times (overload protected)

C270e

14A005

P91
Central Junction
Box (CJB) (14A068)

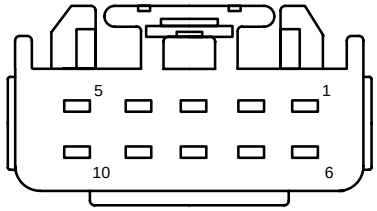

F10117

Pin	Circuit	Circuit function
1	1371 (TN/OG)	Auxiliary blower motor relay, control, to, Rear Electronic Module (REM)
2	–	not used
3	59 (DG/VT)	Fused rear window defrost relay, switched power
4	10 (LG/RD)	Voltage supplied at all times (overload protected)
5	1507 (WH/RD)	Power, feed
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	1322 (BN/WH)	Front blower motor relay, control
8	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
9	1231 (RD/WH)	Battery voltage, to, Module, power sliding door, RH side, and, Module, power sliding door, LH side
10	–	not used