C169

12A522

N19
Reversing lamps
switch

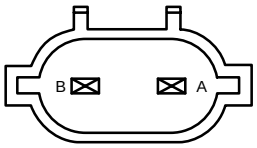

F02297

Pin	Circuit	Circuit Function
A	140 (BK/PK)	Voltage supplied in reverse
B	57 (BK)	Ground

C171

12A522

B48
Heated Oxygen
Sensor (HO2S) #11

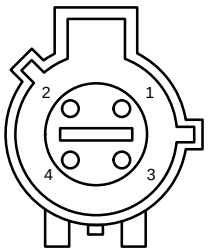

F04124

Pin	Circuit	Circuit Function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11, heater
3	89 (OG)	signal, return
4	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11, input

C172

12A522

B47
Heated Oxygen
Sensor (HO2S) #21

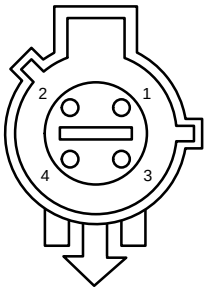

F04265

Pin	Circuit	Circuit Function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21, heater
3	89 (OG)	signal, return
4	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21, input

C174

12A522/9H589

U10
Ignition transformer
capacitor 1

F01031

Pin	Circuit	Circuit Function
1	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)