C362

14K024

P91
Central Junction
Box (CJB) (14A068)

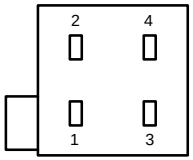

F04024

Pin	Circuit	Circuit function
1	31S-GE49 (BK/BU) + 31S-GE49A (BK/BU)	Ground, Switched
2	15-GG14 (GN/RD) + 15-AA17 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	49-LG15 (BU/BK)	Pulsed power feed (overload protected)
4	49-LG22 (BU/YE)	Pulsed power feed (overload protected)

C363

14K024

P91
Central Junction
Box (CJB) (14A068)

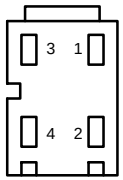

F04029

Pin	Circuit	Circuit function
1	–	not used
2	29-HA6 (OG/YE)	Voltage supplied at all times (overload protected)
3	–	not used
4	–	not used

C364 (NA)

14K024

P91
Central Junction
Box (CJB) (14A068)

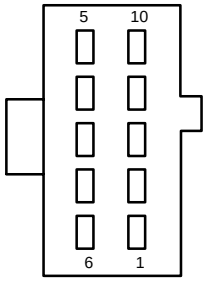

F10002

Pin	Circuit	Circuit function
1	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
2	–	not used
3	15-JA10 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
4	29S-GE53 (OG/WH) + 29S-LB8 (OG)	Voltage supplied at all times (overload protected), Switched
5	31S-HB29 (BK/WH)	Ground, Switched
6	15-FA27 (GN/WH) + 15-FA39 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
7	–	not used
8	–	not used
9	15S-HB2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
10	–	not used