119-3 HEATED SEATS

2001 CONTINENTAL

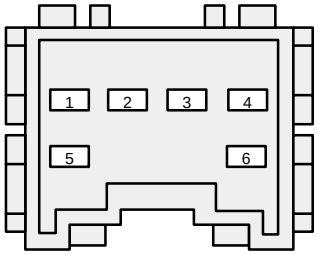

C221

HEATED SEAT SWITCH ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	581 (RD)	Switch to Module - Cushion Enable
2	461 (OG)	Module to Switch
3	579 (BK/OG)	Switch to Temperature Adjust (+)
4	580 (BN)	Switch to Temperature Adjust (–)
5	1050 (LG/VT)	Fused Ignition Switch Feed
6	57 (BK)	Ground

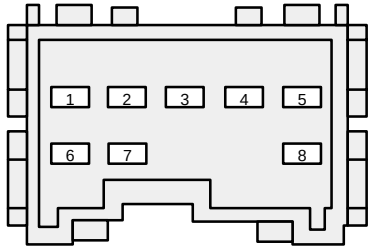

C222

HEATED SEAT SWITCH ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	57 (BK)	Ground
2	1020 (DG/VT)	Switch to Module - Cushion Enable
3	462 (VT)	Switch to Module
4	1018 (LG/OG)	Switch to Temperature Adjust (+)
5	1019 (TN/LB)	Switch to Temperature Adjust (–)
6	19 (LB/RD)	Illumination Feed
7	1050 (LG/VT)	Fused Ignition Switch Feed
8	57 (BK)	Ground