C1186

12B637

Y113
Fuel injector 6
(9F593)

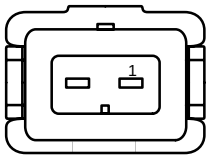

F02089

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1187

14398

K352
Trailer tow relay,
right turn

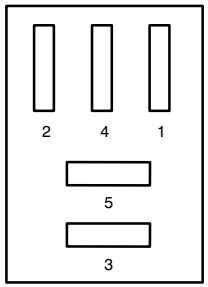

F05110

Pin	Circuit	Circuit function
1	378 (BN/YE)	Turn lamps, feed, right rear
2	1205 (BK)	Ground
3	175 (BK/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	64 (DG)	Trailer tow relay, right turn, output

C1188

14398

K353
Trailer tow relay, left
turn

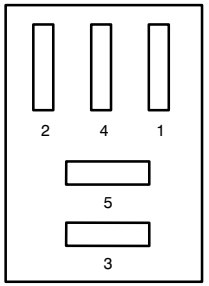

F05110

Pin	Circuit	Circuit function
1	374 (DB/WH)	Turn lamps, feed, left rear
2	1205 (BK)	Ground
3	175 (BK/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	52 (YE)	Trailer tow relay, left turn, output

C1189

12B637

B8
Throttle Position
Sensor (TPS)
(9B989)

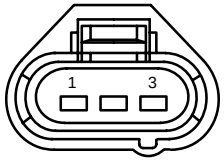

F03171

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
3	351 (BN/WH)	Reference, voltage