C330

14B084

N217
Seat adjust switch,
passenger side front

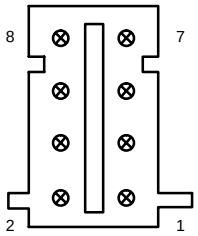

F08245

Pin	Circuit	Circuit function
1	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
2	989 (RD/LG)	Seat adjust switch, to, front, Tilt, Seat motor
3	988 (YE/LG)	Seat adjust switch, to, front, Tilt, Seat motor
4	51 (BK/WH)	Voltage supplied at all times (overload protected)
5	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
6	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
7	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
8	57 (BK)	Ground

C334

14B084

N30
Seat cushion heater,
right front

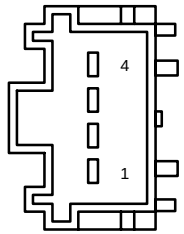

F04139

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Heating element, feed
2	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
4	1066 (GY/LB)	Heating element, return

C335

14B084

N32
Seat back heater,
right front

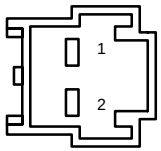

F02077

Pin	Circuit	Circuit function
1	1066 (GY/LB)	Heating element, feed
2	1067 (VT/LB)	Heating element, return