
C1051

12A581

Fuel pump relay

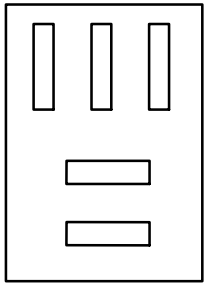


Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	926 (LB/OG)	Fuel pump relay, control
3	1059 (LB/OG)	Voltage supplied at all times (overload protected)
4	–	not used
5	238 (DG/YE)	Fuel pump relay, switched power, output

C1061

12B637

Engine Coolant Temperature (ECT) sender

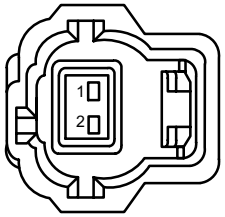


Pin	Circuit	Circuit function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
2	45 (YE/RD)	Ground

C1066

12B637

Idle air control valve (IAC) (9F715)

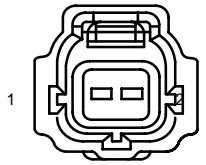


Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle air control valve (IAC) (9F715), control

C1078

12A581

A/C high pressure switch (19D594)

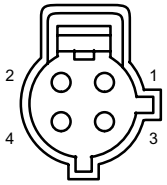


Pin	Circuit	Circuit function
1	439 (TN/LG)	A/C pressure switch, signal
2	–	not used
3	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
4	–	not used

C1100a

14300

Battery (10655)



Pin	Circuit	Circuit function
1	2037 (VT)	Battery cable +
	2037 (VT)	Battery cable +