C934 (GN)

12A522

B48
Heated Oxygen
Sensor (HO2S) #11
(9G444)

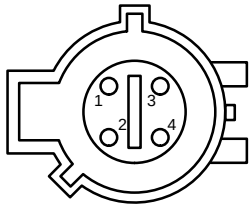

F04124

Pin	Circuit	Circuit function
1	15-RJ14 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ14 (BK/YE)	Ground, Switched
3	9-RJ14 (BN)	Sensor signal return (reference/ground)
4	8-RJ14 (WH)	Sensor signal

C935 (GN)

9H589

B47
Heated Oxygen
Sensor (HO2S) #21
(9G444)

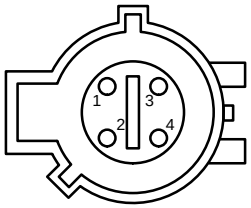

F04124

Pin	Circuit	Circuit function
1	15-RJ15 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ15 (BK/BU)	Ground, Switched
3	9-RJ15 (BN/RD)	Sensor signal return (reference/ground)
4	8-RJ15 (WH/RD)	Sensor signal