C982

14K733

H4
Second horn



F01005

Pin	Circuit	Circuit Function
1	30S-GJ10 (RD/YE)	Voltage supplied at all times (not overload protected), switched

C1023

12A522

B11
Vehicle Speed Sensor (VSS)

Duratec–VE, automatic transmission

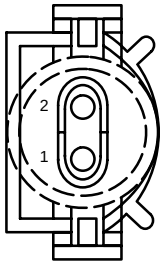

F02031

Pin	Circuit	Circuit Function
1	9-RJ29 (BN/BU)	Sensor signal return (reference/ground)
2	8-RJ29 (WH/BU)	Sensor signal

C1852

N99
Power seat switch

14A699

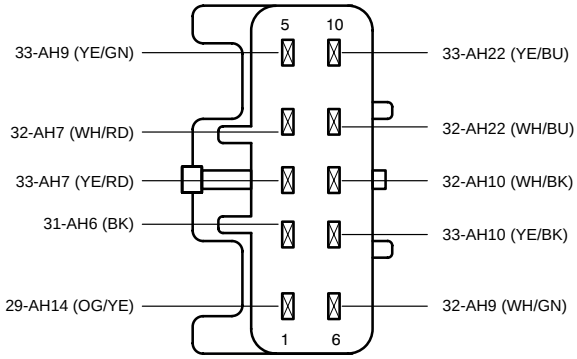

F10041

19K315

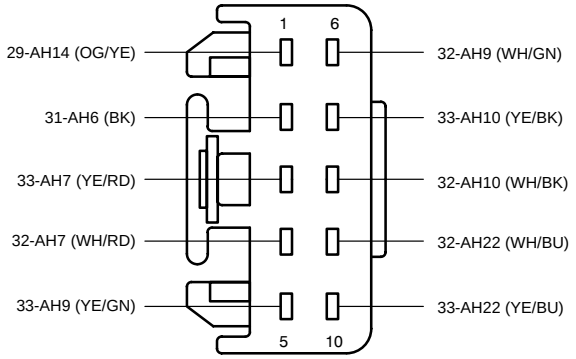

F10042

C1855

18C619

E174
High mounted stoplamp

F02023

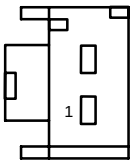

Pin	Circuit	Circuit Function
1	31-LG6 (BK)	Ground
2	15S-LG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched