C707

14A584

M67
Door lock motor,
driver side

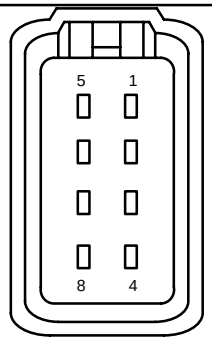

F08083

Pin	Circuit	Circuit function
1	33-AA59 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA59 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	33-AA60 (YE)	Switched between: Battery voltage, Ground or Open
4	31S-AA64 (BK/GN)	Ground, Switched
5	31S-AA61 (BK/BU)	Ground, Switched
6	31-AA58 (BK)	Ground
7	31S-AA62 (BK/WH)	Ground, Switched
8	31S-AA63 (BK/OG)	Ground, Switched

C711

14K024

Y32
Key removal inhibit
solenoid

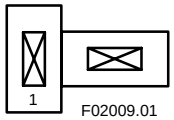

F02009.01

Pin	Circuit	Circuit function
1	29S-TA32 (OG/WH)	Voltage supplied at all times (overload protected), Switched
2	31-TA32 (BK)	Ground
	31-LG25 (BK) + 31-TA32 (BK)	Ground

C717

14K024

N83
Traction Control
System (TCS) dis-
able switch

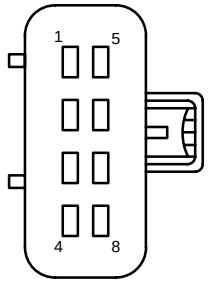

F08060

Pin	Circuit	Circuit function
1	31S-CF54 (BK/WH)	Ground, Switched
2	91-CF54 (BK/WH)	Ground
	91-GH9 (BK/OG)	Ground
3	–	not used
4	31S-CF45A (BK/GN)	Ground, Switched
5	–	not used
6	15-CF45 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
7	31-LH45 (BK) + 31S-LB9 (BK)	Ground
8	64S-LH45 (BU/OG) + 64S-LK40 (BU/RD)	Variable D.C. voltage (not overload protected), Switched