C4186 (GY)

14086

Liftgate chime module

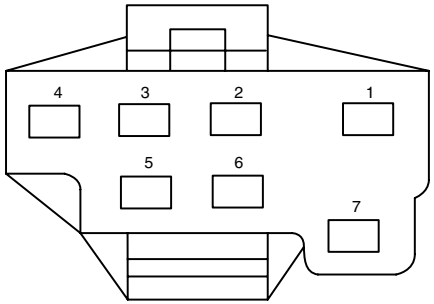

F07089

Pin	Circuit	Circuit function
1	–	not used
2	57 (BK)	Ground
3	–	not used
4	–	not used
5	–	not used
6	1972 (PK/BK)	Liftgate chime module, control
7	1972 (PK/BK)	Liftgate chime module, control

C4187 (WH)

14086

Liftgate home position switch

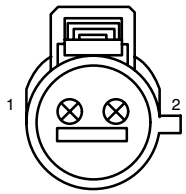

F02525

Pin	Circuit	Circuit function
1	1964 (DG/WH)	Liftgate home position switch, signal
2	57 (BK)	Ground

C4188 (BK)

14086

Liftgate cinching motor

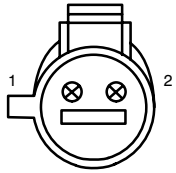

F02373

Pin	Circuit	Circuit function
1	1604 (VT/OG)	Liftgate cinching motor, cinch, feed
2	1606 (DG/WH)	Liftgate cinching motor, uncinch, feed

C4189 (BK)

14086

Liftgate unlatch motor

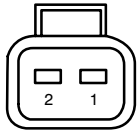

F02527

Pin	Circuit	Circuit function
1	1247 (RD/LG)	Liftgate unlatch motor, return
2	1241 (GY/YE)	Liftgate unlatch motor, feed

C4190 (BK)

14086

Liftgate fork bolt/detent switch

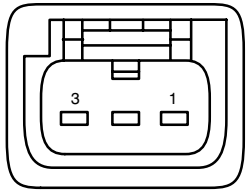

F03241

Pin	Circuit	Circuit function
1	1962 (LG/VT)	Forkbolt, switch, signal
2	57 (BK)	Ground
3	1963 (OG/LB)	Detent, switch, signal