C527

14B121

Exterior rear view mirror switch (17B676)

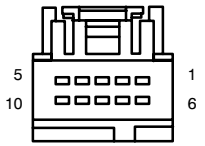

F10135

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	31-AD12 (BK/YE)	Ground
4	34-AD31 (BU/WH)	Up/Down mirror movement, LH side
5	32-AD30 (WH/BK)	Right/Left mirror movement, RH side
6	64S-LH50 (BU/YE)	Illumination, feed
7	33-AD12 (YE)	common
8	34-AD29 (BU/OG)	Up/Down mirror movement, RH side
9	32-AD32 (WH/RD)	Right/Left mirror movement, LH side
10	29-AD12 (OG/YE)	Voltage supplied at all times (overload protected)

C561

14631

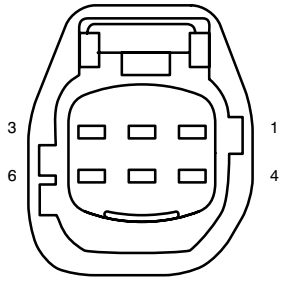

F06161

14K138

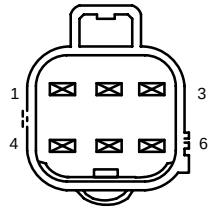

F06140

(1) 29S-AA70 (OG/BK)
(2) 9-AA70 (BN/GN)
(3) 7-AA70 (YE/GN)
(4) 31-AA70 (BK/GN)
(5) 8-AA70 (WH/GN)
(6) 10-AA70 (GY/OG)