C602

14A584

Door ajar switch,
right front

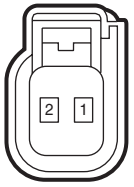

YF1T-14A464-GA (F)

Pin	Circuit	Circuit Function
1	1205 (BK)	General ground (type 4 ground)
2	761 (GY/RD)	Passenger door ajar lamp to module, GEM-input

C603

14A584

Door lock actuator,
right front

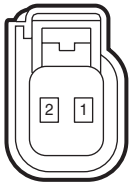

YF1T-14A464-TA (F)

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock motor (lock)
2	118 (PK/OG)	Door lock motor (unlock)

C605

14A488

Door lock switch,
passenger side

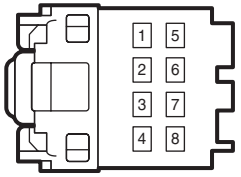

2L7T-14489-CA (F)

Pin	Circuit	Circuit Function
1	1205 (BK)	General ground (type 4 ground)
2	1011 (TN/OG)	Pulse width dimmer module-fused feed
3	119 (PK/YE)	Door lock switch (lock)
4	1205 (BK)	General ground (type 4 ground)
5	—	not used
6	—	not used
7	120 (PK/LG)	Door lock switch (unlock)
8	—	not used

C608

14A488

Power window motor,
right front

XS71-14A464-LBA (F)

Pin	Circuit	Circuit Function
1	313 (WH/YE)	LH front window regulator sw to RH front window regulator motor
2	314 (TN/LB)	LH front window regulator sw to RH front window regulator motor