C266b

14N104

A30
Instrument cluster

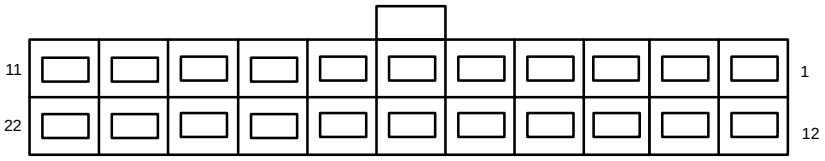

F22031

Pin	Circuit	Circuit Function
1	ZY03 (BU/OG)	Overdrive indicator, control
2	NF01 (GN/BK)	Low washer fluid indicator
3	PS15 (OG)	Air bag indicator, control
4	LA03 (OG/BU)	High beam lamp, left front
5	–	not used
6	EJ07 (RD)	cruise enabled, indicator, control
7	EJ23 (YE)	Cruise set, indicator, control
8	IG01 (PK)	Tail lamp relay, switched output
9	–	not used
10	–	not used
11	MJE2 (BK/RD)	Ground
12	LB15 (RD/WH)	Turn lamps, Right, switched power

Pin	Circuit	Circuit Function
13	MA01 (BU)	Voltage supplied in Start and Run (overload protected)
14	LB16 (RD/GN)	Turn lamps, Left, switched power
15	NI03 (GN)	Safety belt indicator, control
16	MA06 (VT)	Voltage supplied at all times (overload protected)
17	AV05 (OG/BK)	Powertrain Control Module (PCM) - fuel flow
18	IG91 (PK/BK)	Illumination, Ground
19	–	not used
20	MAE1 (BK)	Ground
21	–	not used
22	MJ01 (PK/BU)	Vehicle Speed Sensor (VSS) +