C3199 (BU)

Early production

13A409

Third row folding seat switch, left front

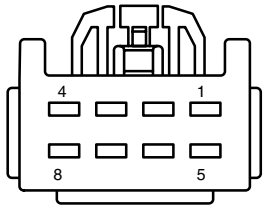

F08167

Pin	Circuit	Circuit function
1	–	not used
2	2111 (OG/WH)	Third row folding seat motor, left, Down, feed
3	1947 (DG/WH)	Third row folding seat motor, left, Down, feed
4	51 (BK/WH)	Third row folding seat relay, left, output
5	–	not used
6	–	not used
7	1948 (LB/WH)	Third row folding seat motor, left, Up, feed
8	2112 (OG/BK)	Third row folding seat motor, left, Up, feed

C3200 (GN)

Early production

13A409

Third row folding seat switch, right front

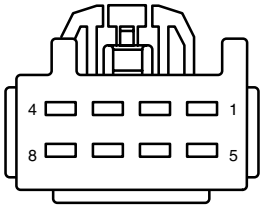

F08193

Pin	Circuit	Circuit function
1	–	not used
2	2114 (YE/BK)	Third row folding seat motor, right, Up, feed
3	1950 (PK/LB)	Third row folding seat motor, right, Up, feed
4	1946 (OG/LB)	Third row folding seat relay, right, output
5	–	not used
6	–	not used
7	1949 (OG/BK)	Third row folding seat motor, right, Down, feed
8	2113 (YE/WH)	Third row folding seat motor, right, Down, feed

C3201 (YE)

14A005

Safety belt buckle pretensioner, driver

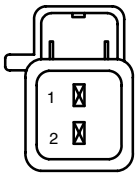

F02042

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Safety belt buckle pretensioner, driver, feed
2	1080 (LG/BK)	Safety belt buckle pretensioner, driver, return