C102a

14A280

Generator

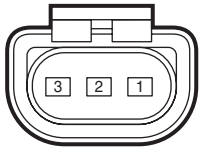

F5OB-14A464-BA (F)

Pin	Circuit	Circuit Function
1	904 (LG/RD)	Ignition switch "coil"/"accy" to alternator regulator "ign" terminal
2	—	Not used
3	35 (OG/LB)	Alternator regulator "F" terminal to alternator

C102b

14A280

Generator



F65B-14463-CA

Pin	Circuit	Circuit Function
1	38 (BK/OG)	Power supply to battery

C103

12B637

Oil pressure switch

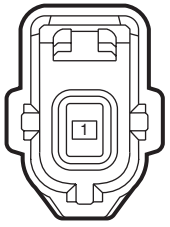

F8ZB-14A464-BA (F)

Pin	Circuit	Circuit Function
1	31 (WH/RD)	Oil pressure indicator to oil pressure sending unit

C107

12B637

Cylinder-head temperature sensor

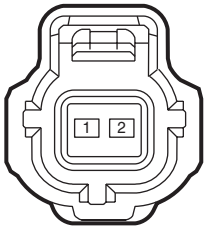

F65B-14A464-JB (F)

Pin	Circuit	Circuit Function
1	1102 (YE/LG)	Module, powertrain control - Cylinder Head Temp. (CHT) sensor
2	359 (GY/RD)	Sensor, signal return

C108

12B637

Knock sensor

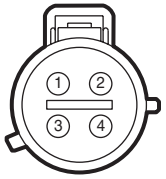

F3LB-14A624-ZB (M)

Pin	Circuit	Circuit Function
1	1274 (DG/WH)	Module, Powertrain Control to knock sensor, #2, Negative
2	311 (DG/VT)	Module, Powertrain Control to knock sensor, #2, Positive
3	1273 (YE)	Module, Powertrain Control to knock sensor, #1, Negative
4	310 (YE/RD)	Module, Powertrain Control to knock sensor, #1, Positive

C110

14398

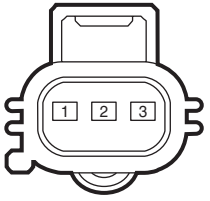

XW4T-14A624-AJB (M)

2C195

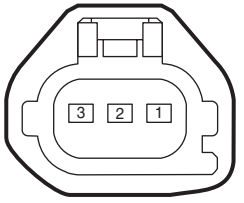

XW4T-14A464-EC (F)

(1) 3603 (RD)
(2) 3600 (RD/WH)
(3) 3601 (WH/RD)