C1423 (GY)

14B527

Alternate fuel injector 8

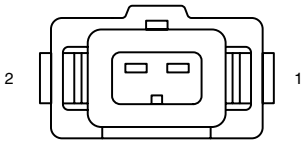

F02351

Pin	Circuit	Circuit function
1	2106 (DG)	Alternate fuel injector 8, control
2	2107 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C1425 (BK)

14B527

Fuel tank pressure sensor

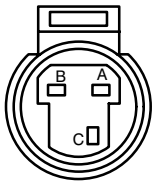

F03347

Pin	Circuit	Circuit function
A	1160 (BN/WH)	Signal return
B	1163 (BN)	Reference voltage
C	1161 (DG/OG)	Fuel tank pressure sensor, signal