C1869

14K138

M123
Window regulator motor, passenger side front



F02051

Pin	Circuit	Circuit function
1	32-AJ17 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	33-AJ17 (YE/VT)	Switched between: Battery voltage, Ground or Open

C1872

14014

Y19
Speaker, right rear (18808)



F02058

Pin	Circuit	Circuit function
1	8-MD18 (WH)	Sensor signal
2	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)

C1885a

14300

O5
Generator


F01014

Pin	Circuit	Circuit function
1	29-BA6 (OG/YE)	Voltage supplied at all times (overload protected)

C1885b

12A522

O5
Generator

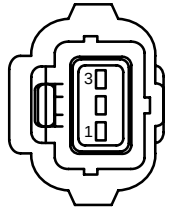

F03093

Pin	Circuit	Circuit function
1	15S-BA9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	8-BA9 (WH/GN)	Sensor signal
3	30-BA8 (RD)	Voltage supplied at all times (not overload protected)

C1891

18C619

R19
Rear window defrost grid (18C618)


F01005

Pin	Circuit	Circuit function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched