C270h

14401

P91
Central Junction
Box (CJB) (14A068)

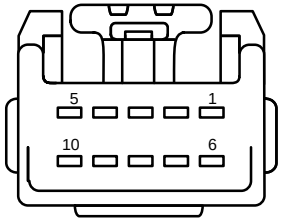

F10091

Pin	Circuit	Circuit function
1	–	not used
2	1050 (LG/VT)	Voltage supplied in Start and Run (overload protected)
3	1050 (LG/VT)	Voltage supplied in Start and Run (overload protected)
4	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
	489 (PK/BK)	Voltage supplied in Start and Run (overload protected)
5	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
6	792 (TN/YE)	Battery saver relay, control
	1005 (VT/OG)	Battery saver relay, control
7	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
8	–	not used
	10 (LG/RD)	Voltage supplied at all times (overload protected)
9	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
	1003 (GY/YE)	Voltage supplied in Start (overload protected)
10	–	not used

C271

19C603

M200
Front blower motor
speed controller
(19E624)

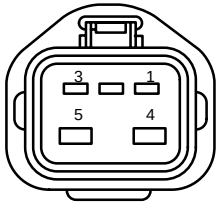

F05089

Pin	Circuit	Circuit function
1	937 (RD/WH)	Electronic Automatic Temperature Control (EATC) module (19980) to Front blower motor speed controller (19E624)
2	776 (OG/BK)	Blower motor speed controller, input
3	755 (BN/WH)	Electronic Automatic Temperature Control (EATC) module (19980) to Front blower motor speed controller (19E624)
4	536 (BK/LG)	Blower motor relay, Blower motor
5	1205 (BK)	Ground