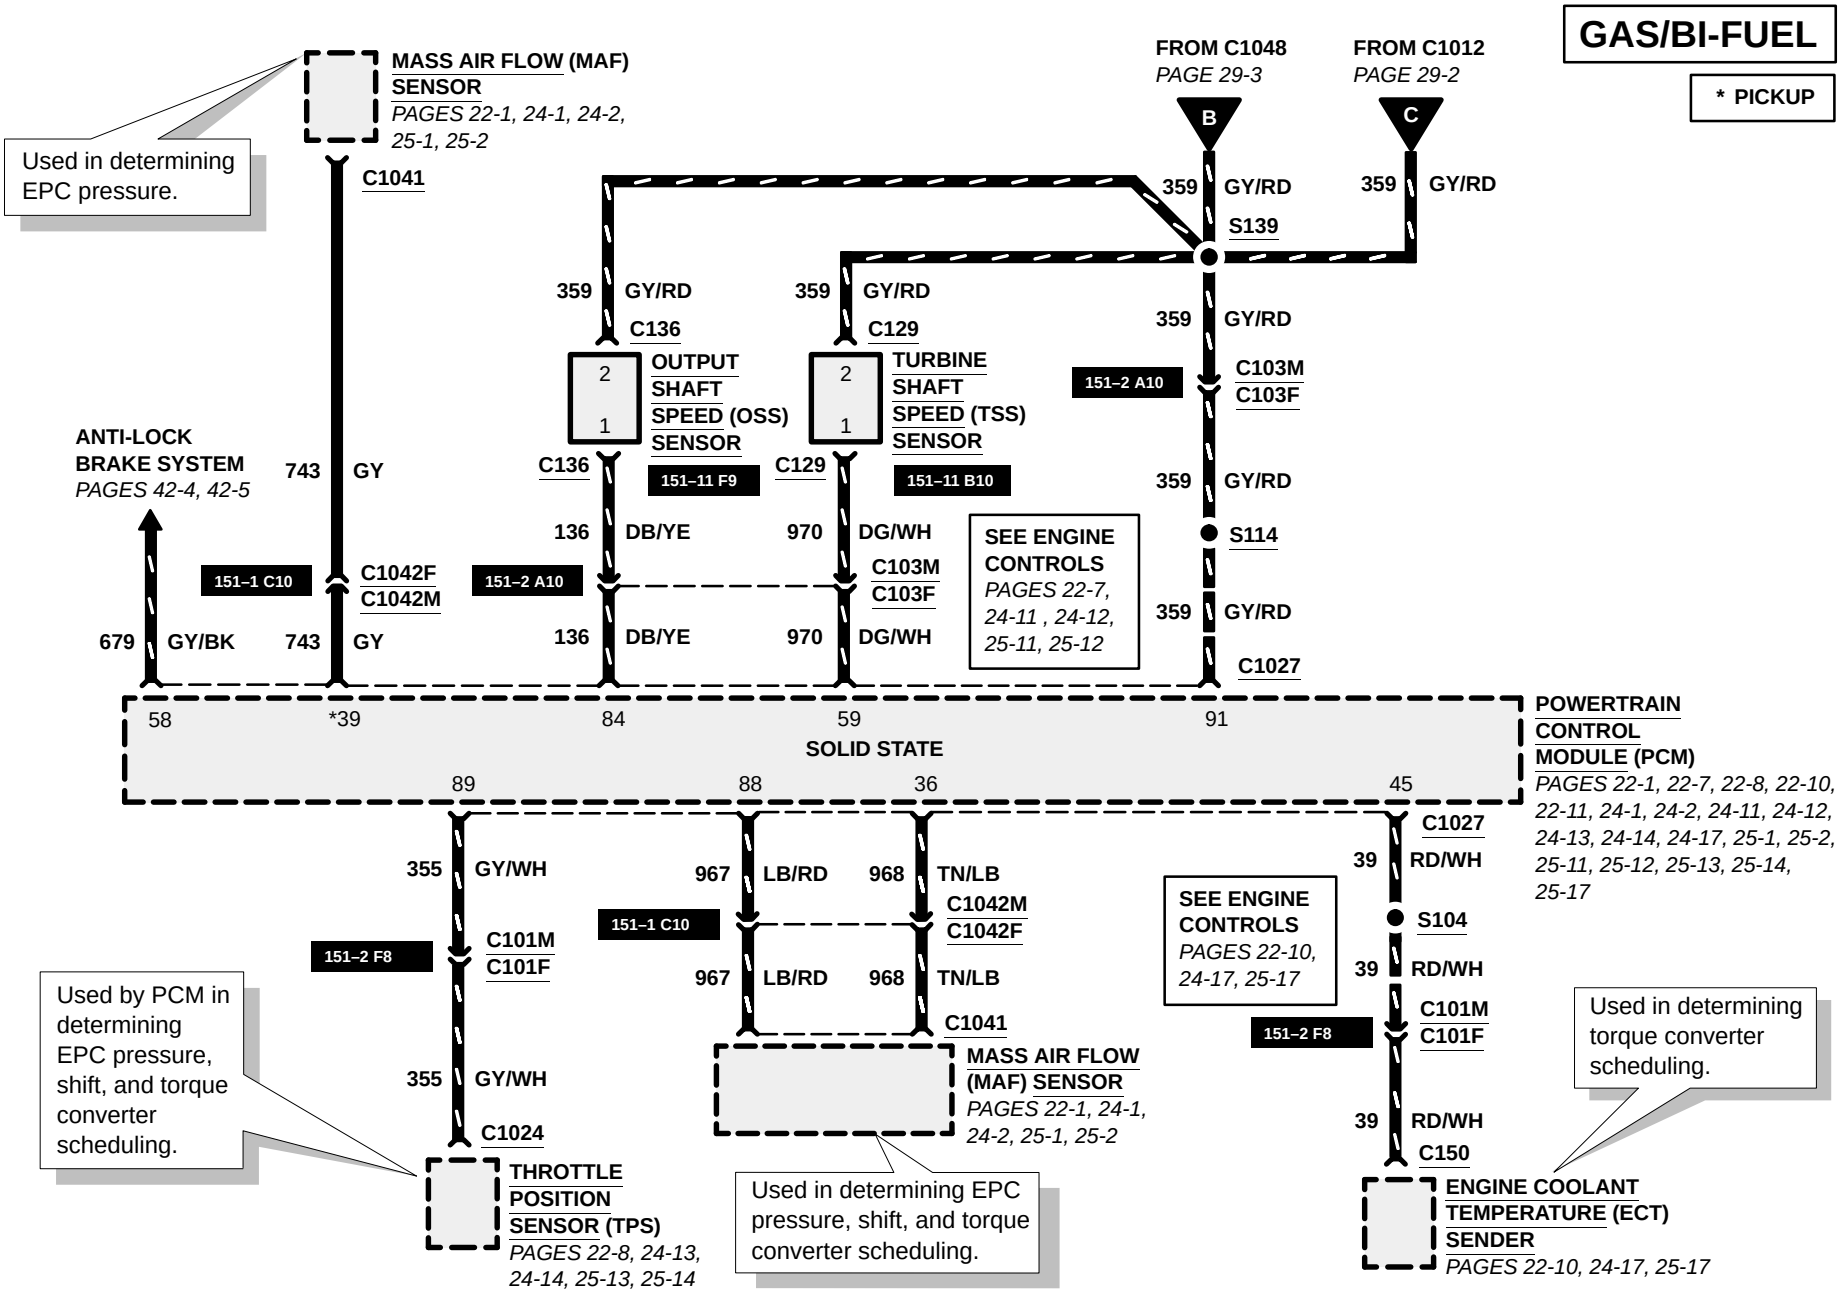
GAS/BI-FUEL
* PICKUP
MASS AIR FLOW (MAF) SENSOR
PAGES 22-1, 24-1, 24-2, 25-1, 25-2
Used in determining EPC pressure.
C1041
FROM C1048
PAGE 29-3
FROM C1012
PAGE 29-2
B
C
359 GY/RD
S139
359 GY/RD
359 GY/RD
C136
C129
359 GY/RD
C103M
C103F
151–2 A10
OUTPUT SHAFT SPEED (OSS) SENSOR
TURBINE SHAFT SPEED (TSS) SENSOR
ANTI-LOCK BRAKE SYSTEM
PAGES 42-4, 42-5
743 GY
C136
151–11 F9
C129
151–11 B10
359 GY/RD
S114
136 DB/YE
970 DG/WH
SEE ENGINE CONTROLS
PAGES 22-7, 24-11 , 24-12, 25-11, 25-12
151–1 C10
C1042F
C1042M
151–2 A10
C103M
C103F
679 GY/BK
743 GY
136 DB/YE
970 DG/WH
359 GY/RD
C1027
58
*39
84
59
91
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-1, 22-7, 22-8, 22-10, 22-11, 24-1, 24-2, 24-11, 24-12, 24-13, 24-14, 24-17, 25-1, 25-2, 25-11, 25-12, 25-13, 25-14, 25-17
89
88
36
45
C1027
39 RD/WH
S104
39 RD/WH
C101M
C101F
151–2 F8
355 GY/WH
967 LB/RD
968 TN/LB
C1042M
C1042F
151–1 C10
C101M
C101F
151–2 F8
967 LB/RD
968 TN/LB
C1041
SEE ENGINE CONTROLS
PAGES 22-10, 24-17, 25-17
Used by PCM in determining EPC pressure, shift, and torque converter scheduling.
355 GY/WH
C1024
MASS AIR FLOW (MAF) SENSOR
PAGES 22-1, 24-1, 24-2, 25-1, 25-2
Used in determining EPC pressure, shift, and torque converter scheduling.
Used in determining torque converter scheduling.
39 RD/WH
C150
THROTTLE POSITION SENSOR (TPS)
PAGES 22-8, 24-13, 24-14, 25-13, 25-14
ENGINE COOLANT TEMPERATURE (ECT) SENDER
PAGES 22-10, 24-17, 25-17