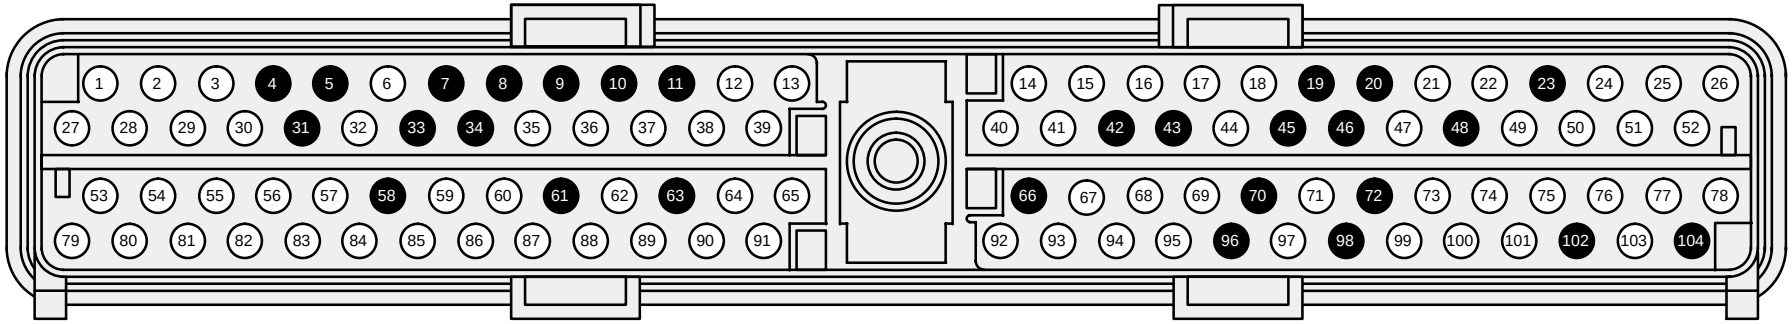

C202
POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	315 (VT/OG)	Shift Solenoid B	18	1215 (WH/LG)	NOT USED
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL) Control	19	–	NOT USED
			20	–	NOT USED
3	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor (TR1)	21	349 (DB)	Crankshaft Position (CKP) Sensor
			22	350 (GY)	Crankshaft Position (CKP) Sensor
4	–	NOT USED	23	–	NOT USED
5	–	NOT USED	24	570 (BK/WH)	Power Ground
6	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor	25	57 (BK)	Chassis Ground
7	–	NOT USED	26	95 (TN/WH)	Ignition Coil #1
8	–	NOT USED	27	237 (OG/YE)	Shift Solenoid A
9	–	NOT USED	28	924 (BN/OG)	Shift Solenoid D
10	–	NOT USED	29	224 (TN/WH)	Transmission Control Switch (TCS) Input
11	–	NOT USED			
12	29 (YE/WH)	Fuel Gauge Sender	30	343 (DB/LG)	NOT USED
13	107 (VT)	Data Link Connector (DLC)	31	–	NOT USED
14	784 (LB/BK)	4WD Low Input	32	311 (DG/VT)	Knock Sensor Return
15	915 (PK/LB)	SCP Data Bus (–)	33	–	NOT USED
16	914 (TN/OG)	SCP Data Bus (+)	34	–	NOT USED
17	1216 (GY/OG)	NOT USED			

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
35	392 (RD/LG)	Heated Oxygen Sensor #12 (HO2S) Input (Catalyst Monitor)	62	791 (RD/VT)	Fuel Tank Pressure Sensor
			63	–	NOT USED
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return	64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor Input (TR3A)
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor	65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) Sensor Input
38	354 (LG/RD)	Engine Coolant Temperature (ECT) Sensor Input	66	–	NOT USED
39	743 (GY)	Intake Air Temperature (IAT) Sensor Input	67	91 (VT/WH)	EVAP Canister Vent Solenoid
			68	679 (GY/BK)	Vehicle Speed Sensor (VSS) Input
40	238 (DG/YE)	Fuel Pump Relay Input	69	331 (PK/TN)	NOT USED
41	348 (VT)	NOT USED	70	–	NOT USED
42	–	NOT USED	71	361 (RD)	Power (PWR)
43	–	NOT USED	72	–	NOT USED
44	325 (DB/OG)	NOT USED	73	559 (TN/BK)	Fuel Injector #5 Control
45	–	NOT USED	74	557 (BN/YE)	Fuel Injector #3 Control
46	–	NOT USED	75	555 (TN)	Fuel Injector #1 Control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Control	76	570 (BK/WH)	Power Ground
48	–	NOT USED	77	570 (BK/WH)	Power Ground
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor (TR2)	78	97 (TN/LG)	Ignition Coil #3
			79	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
50	1143 (WH/BK)	Digital Transmission Range (DTR) Sensor (TR4)	80	926 (LB/OG)	Fuel Pump Relay Control
51	570 (BK/WH)	Power Ground	81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
52	96 (TN/OG)	Ignition Coil			
53	971 (PK/BK)	Shift Solenoid C	82	1017 (BK/WH)	NOT USED
54	480 (VT/YE)	Torque Converter Clutch Solenoid	83	264 (WH/LB)	Idle Air Control (IAC) Valve Control
55	785 (BK/LG)	Keep Alive Power (B+)	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
56	191 (LG/BK)	Vapor Management Valve	85	282 (DB/OG)	Camshaft Position (CMP) Sensor Input
57	310 (YE/RD)	Knock Sensor Input	86	347 (BK/YE)	NOT USED
58	–	NOT USED	87	94 (RD/BK)	Heated Oxygen Sensor #21 (HO2S) Input
59	134 (GY/OG)	Intermediate Shaft Speed (ISS) Sensor	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor Input
60	74 (GY/LB)	Heated Oxygen Sensor #11 (HO2S) Input	89	355 (GY/WH)	Throttle Position (TP) Sensor Input
			90	351 (BN/WH)	Reference Voltage
61	–	NOT USED			

PIN	CIRCUIT	CIRCUIT FUNCTION
91	359 (GY/RD)	Signal Return
92	810 (RD/LG)	Brake Pedal Position (BPP) Switch Input
93	387 (RD/WH)	Heated Oxygen Sensor #11 (HO2S) Heater
94	388 (YE/LB)	Heated Oxygen Sensor #21 (HO2S) Heater
95	389 (WH/BK)	Heated Oxygen Sensor #12 (HO2S) Heater (Catalyst Monitor)
96	–	NOT USED
97	361 (RD)	Power (PWR)
98	–	NOT USED
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	–	NOT USED

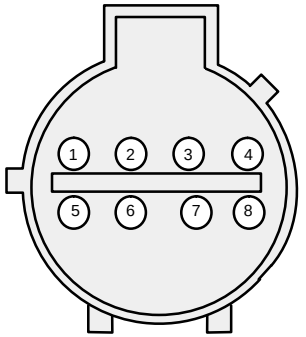

C311
FUEL TANK ASSEMBLY
(HARNESS SIDE)

PIN	CIRCUIT	CIRCUIT FUNCTION
1	351 (BN/WH)	Reference Voltage
2	640 (RD/YE)	Power (Hot in Start or Run)
3	787 (PK/BK)	Fuel Pump Power
4	396 (BK/OG)	Dedicated Ground
5	791 (RD/PK)	Sensor Signal Return
6	359 (GY/RD)	Fuel Tank Pressure Sensor to PCM
7	57 (BK)	Ground
8	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender