C180

9H589

B41
Camshaft position sensor

F02109

Pin	Circuit	Circuit Function
1	1202 (BN/LG)	Ground
2	282 (DB/OG)	Camshaft position sensor, input

C181

9H589

Y108
Injector 1



F02058

Pin	Circuit	Circuit Function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182

9H589

Y109
Injector 2



F02058

Pin	Circuit	Circuit Function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183

9H589

Y110
Injector 3



F02058

Pin	Circuit	Circuit Function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184

9H589

Y111
Injector 4



F02058

Pin	Circuit	Circuit Function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C185

9H589

Y112
Injector 5



F02058

Pin	Circuit	Circuit Function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C186

9H589

Y113
Injector 6



F02058

Pin	Circuit	Circuit Function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C189

9H589

B8
Throttle Position Sensor (TPS)

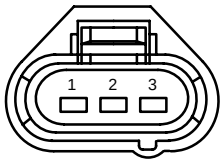

F03171

Pin	Circuit	Circuit Function
1	89 (OG)	signal, return
2	355 (GY/WH)	Throttle Position Sensor (TPS), input
3	351 (BN/WH)	Reference, voltage