C632

14014

N98
Tailgate/decklid anti–theft inhibit switch

F02005

Pin	Circuit	Circuit Function
1	31S-GL27 (BK/OG)	Ground, switched
2	31-GL27 (BK)	Ground

C640

9H589

T2
Ignition transformer

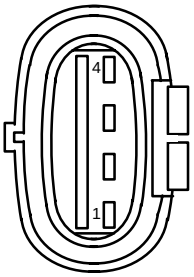

F04053

Pin	Circuit	Circuit Function
1	9-RR1 (BN/BU)	Sensor signal return (reference/ground)
2	9-RR3 (BY/YE)	Sensor signal return (reference/ground)
3	9-RR2 (BN/GN)	Sensor signal return (reference/ground)
4	15-RR4 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C641

12A522

T2
Ignition transformer

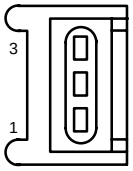

F03028

Pin	Circuit	Circuit Function
1	9-RR1 (BN/BU)	Sensor signal return (reference/ground)
2	15-RJ26 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
3	9-RR2 (BN/GN)	Sensor signal return (reference/ground)

C642

9H589
12A522

U1
Ignition transformer capacitor


F01005

Pin	Circuit	Circuit Function
1	15-MD20 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
	15-MD20 (GN/BU) + 15-RR4 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)