C399

14A005

Sliding door contact switch, left

Late production



F08307

Pin	Circuit	Circuit function
1	1386 (OG)	Power sliding door unit, LH side, Door lock actuator, Unlock
2	800 (GY/LB)	Speaker, left rear (18808) +
	827 (TN/WH)	Speaker, left rear (18808) +
3	1387 (VT)	Power sliding door unit, LH side, Door lock actuator, Lock
4	801 (TN/YE)	Speaker, left rear (18808) –
5	1251 (YE/RD)	Power sliding door motor, return
6	1227 (WH)	Detent switch, LH, to, Module, power sliding door, LH side
7	1252 (GY/RD)	Module, power sliding door, LH side, to, Latch/unlatch motor, LH
8	–	not used

Early production

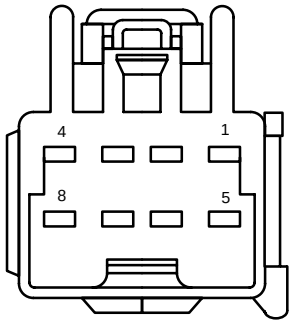

F08213

Pin	Circuit	Circuit function
1	1251 (YE/RD)	Power sliding door motor, return
2	–	not used
3	1227 (WH)	Detent switch, LH, to, Module, power sliding door, LH side
4	1252 (GY/RD)	Module, power sliding door, LH side, to, Latch/unlatch motor, LH
5	800 (GY/LB)	Speaker, left rear (18808) +
	827 (TN/WH)	Speaker, left rear (18808) +
6	1387 (VT)	Power sliding door unit, LH side, Door lock actuator, Lock
7	1388 (GY)	Power sliding door unit, LH side, Door lock actuator, Unlock
8	801 (TN/YE)	Speaker, left rear (18808) –