C3073

14A005

Yaw velocity sensor

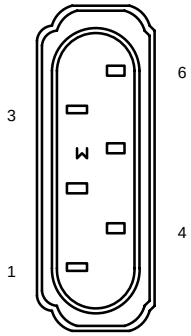

F06126

Pin	Circuit	Circuit function
1	9-CF66 (BN/BU)	Yaw velocity sensor, Low
2	8-CF66 (WH/BU)	Yaw velocity sensor, High
3	9-CF67 (BN/RD)	Signal return
4	–	not used
5	7-CF67 (YE/RD)	Yaw velocity sensor, position sense
6	–	not used

C3162

19K315

Heated seat module, left rear

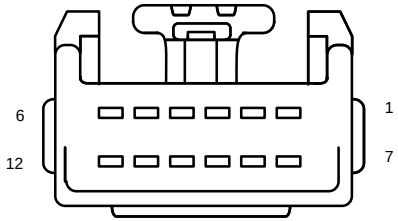

F12075

Pin	Circuit	Circuit function
1	31-HC21 (BK/GN)	Ground
2	–	not used
3	9-HC23 (BN/YE)	Temperature, return
4	8-HC23 (WH/BK)	Temperature, signal
5	20-HC21D (PK/BK)	Voltage in Run (overload protected)
6	20S-HC17 (PK)	heater, feed
7	31S-HC16 (BK/BU)	heater, return
8	8-HC21 (WH/GN)	Climate controlled seat module - High
9	7-HC22 (YE)	indicator - Low
10	7-HC21 (YE/GN)	indicator - High
11	10-HC21 (GY/OG)	Climate controlled seat module - Height sensor, left front
12	30-HC21 (RD/GN)	Voltage supplied in Start and Run (overload protected)