C278

14A005

N82
Brake pedal position
switch (13480)

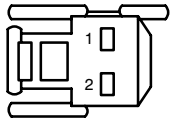

F02047

Pin	Circuit	Circuit Function
1	29-CF58 (OG/GN)	Voltage supplied at all times (overload protected)
2	29S-CF1 (OG/BU)	Voltage supplied at all times (overload protected), Switched

C280

14401

N452a
Traction control
switch (2C355)

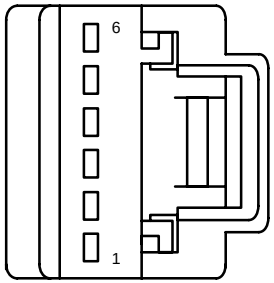

F06128

Pin	Circuit	Circuit Function
1	31S-CF45 (BK/GN)	Ground, switch
2	–	not used
3	15-CF54 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
4	8-CF54 (WH/VT)	Sensor signal
5	31-LH45 (BK)	Ground
6	64S-LH45 (BU/OG)	Variable D.C. voltage (not overload protected), switch

C282

14A005

N316a
Inertia Fuel Shutoff
(IFS) switch (9341)



F03032

Pin	Circuit	Circuit Function
1	15-RP12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	15-RP3 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
3	–	not used