C466

18B864

A14
Subwoofer
amplifier
(18C804)

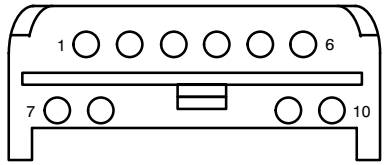

F10009

Pin	Circuit	Circuit function
1	173 (DG/VT)	Radio (18806) - Subwoofer, High, mute
2	694 (BK/LG)	Ground
3	–	not used
4	–	not used
5	–	not used
6	828 (VT/LB)	Voltage supplied at all times (overload protected)
7	167 (BN/OG)	TX signal
8	168 (RD/BK)	RX signal
9	–	not used
10	–	not used

C467

18C673

N62
Rear window wiper
disable switch

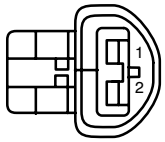

F02115

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	700 (WH/VT)	Liftgate ajar switch

C474

14A435

O21
Power point, rear
(19G247)

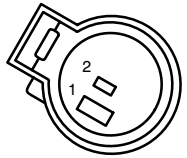

F02247

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	687 (GY/YE)	Voltage supplied at all times (overload protected)

C476 (GY)

14A583

M218
Rear wiper motor
assembly

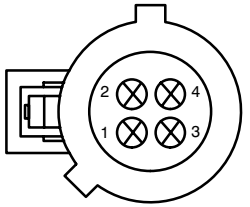

F04177

Pin	Circuit	Circuit function
1	410 (WH/OG)	Rear window wiper raise relay, switched output
2	411 (BK/LB)	Rear window wiper lower relay, switched output
3	587 (VT/YE)	Liftgate wiper motor, input
4	57 (BK)	Ground