C275

14401

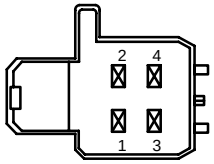

F04379

14B079

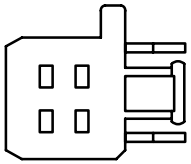

F04122

(1) 1205 (BK)
(2)
(3) 1049 (BN/PK)
(4)

C278

14401

N82
Brake pedal position switch (13480)

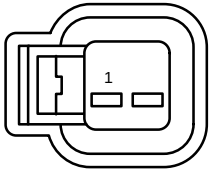

F02069

Pin	Circuit	Circuit function
1	1052 (TN/BK)	Brake pedal position switch (13480), output
2	10 (LG/RD)	Voltage supplied at all times (overload protected)

C279

14401

N405
Transmission control switch

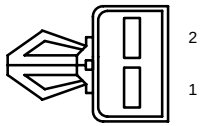

F02045

Pin	Circuit	Circuit function
1	224 (TN/WH)	PCM, to transmission overdrive cancel switch
2	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)

C280

14674

N452
Traction control switch

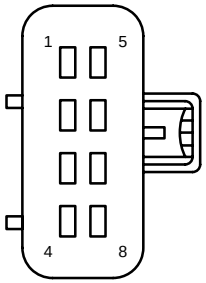

F08110

Pin	Circuit	Circuit function
1	1003 (GY/YE)	Power (Start or Run)
2	959 (GY)	On/Off signal, traction assist
3	–	not used
4	960 (BK/LB)	Traction assist On/Off indicator, control
5	–	not used
6	1003 (GY/YE)	Power (Start or Run)
7	1205 (BK)	Switch illumination Ground
8	235 (RD/BK)	Switch illumination, control