C3124

14406

B233
Fuel tank temperature sensor

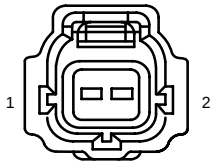

F02091

Pin	Circuit	Circuit function
1	204 (OG/LG)	Fuel tank temperature sensor, signal
2	359 (GY/RD)	signal, return

C3125

14A655

Y267
Aft–axle fuel tank valve, front

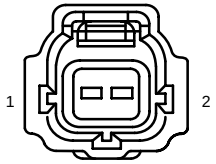

F02091

Pin	Circuit	Circuit function
1	787 (PK/BK)	Fuel pump, Power
2	57 (BK)	Ground

C3126

14A655

Y268
Aft–axle fuel tank valve, rear

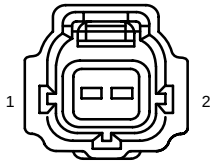

F02091

Pin	Circuit	Circuit function
1	787 (PK/BK)	Fuel pump, Power
2	57 (BK)	Ground

C3127

14406

A240
Fuel pump module

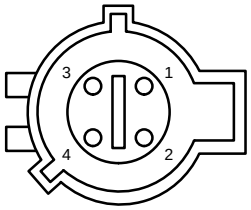

F04082

Pin	Circuit	Circuit function
1	787 (PK/BK)	Fuel pump, Power
2	29 (YE/WH)	Fuel pump/fuel gauge sender
3	651 (BK/YE)	Ground
4	57 (BK)	Ground

C3128

9A350

A408
In–transit fuel pump module

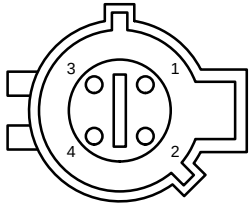

F04075

Pin	Circuit	Circuit function
1	787 (PK/BK)	Fuel pump, Power
2	29 (YE/WH)	Fuel pump/fuel gauge sender
3	359 (GY/RD)	signal, return
4	57 (BK)	Ground

C3129

14A200

N84
Door ajar switch, left front

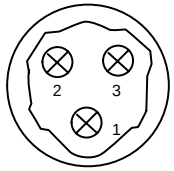

F03261

Pin	Circuit	Circuit function
1	159 (RD/PK)	Door ajar switch, left front, signal
2	54 (LG/YE)	Voltage supplied at all times (overload protected)
3	53 (BK/LB)	Interior lamp relay, switched power, output