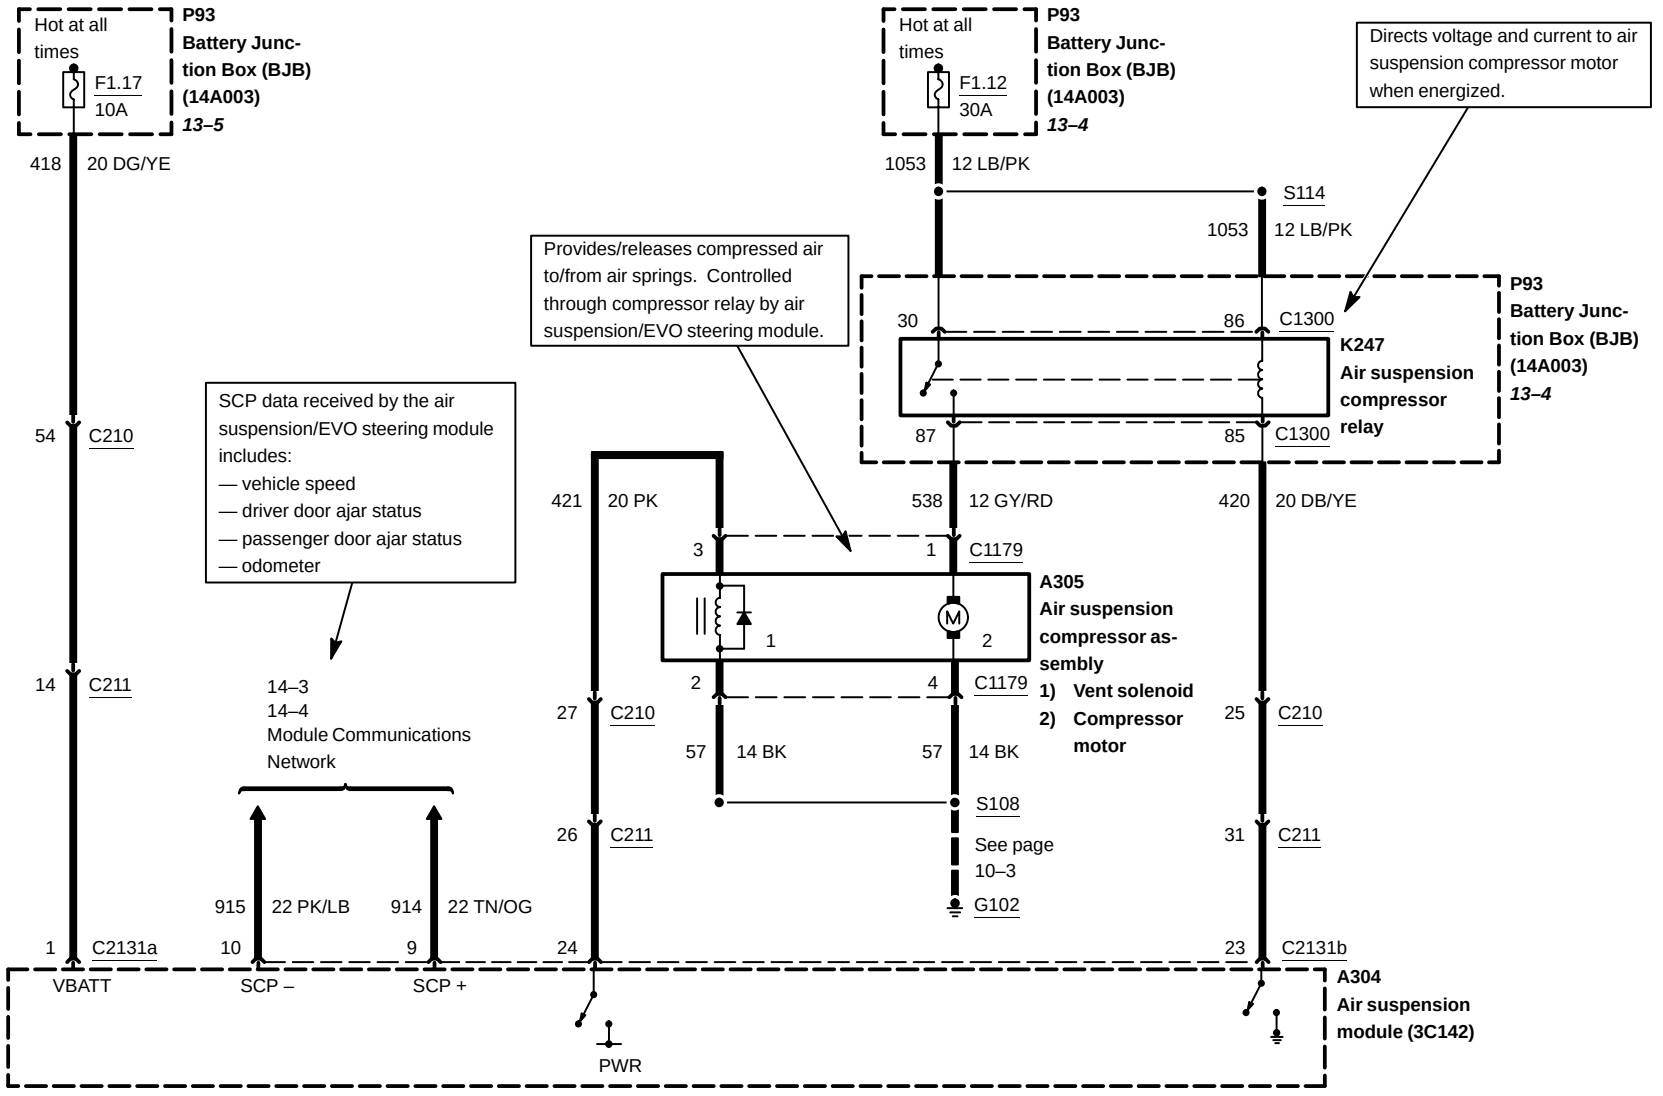
Hot at all times
F1.17
10A
P93
Battery Junction Box (BJB)
(14A003)
13–5
418
20 DG/YE
54
C210
14
C211
1
C2131a
VBATT
Hot at all times
F1.12
30A
P93
Battery Junction Box (BJB)
(14A003)
13–4
1053
12 LB/PK
S114
1053
12 LB/PK
Directs voltage and current to air suspension compressor motor when energized.
Provides/releases compressed air to/from air springs. Controlled through compressor relay by air suspension/EVO steering module.
30
86
C1300
K247
Air suspension compressor relay
87
85
C1300
P93
Battery Junction Box (BJB)
(14A003)
13–4
SCP data received by the air suspension/EVO steering module includes:
— vehicle speed
— driver door ajar status
— passenger door ajar status
— odometer
421
20 PK
538
12 GY/RD
420
20 DB/YE
3
1
C1179
A305
Air suspension compressor assembly
1) Vent solenoid
2) Compressor motor
1
2
2
4
C1179
27
C210
57
14 BK
57
14 BK
25
C210
S108
See page 10–3
G102
26
C211
31
C211
14–3
14–4
Module Communications Network
915
22 PK/LB
914
22 TN/OG
10
9
24
23
C2131b
SCP –
SCP +
PWR
A304
Air suspension module (3C142)