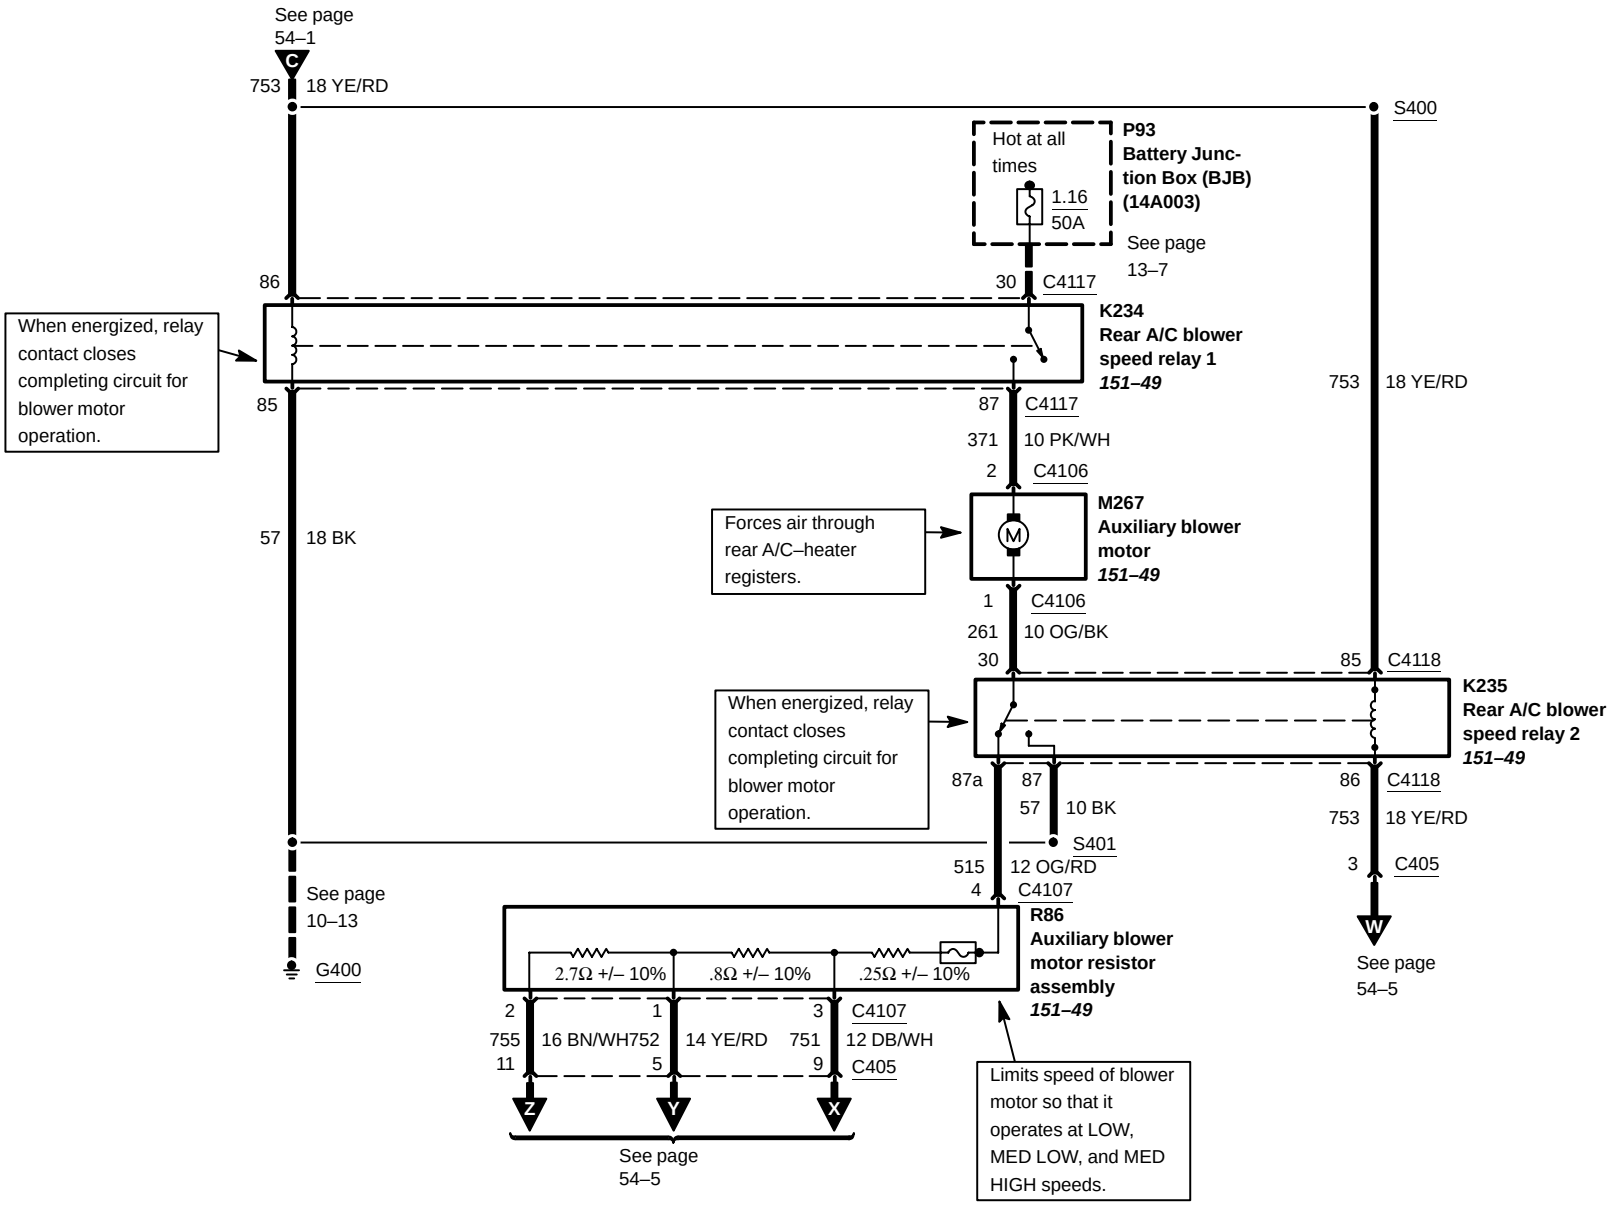
See page 54–1
C
753 18 YE/RD
S400
Hot at all times
1.16 50A
P93 Battery Junction Box (BJB) (14A003)
See page 13–7
86
30 C4117
When energized, relay contact closes completing circuit for blower motor operation.
K234 Rear A/C blower speed relay 1 151–49
85
87 C4117
753 18 YE/RD
371 10 PK/WH
2 C4106
57 18 BK
Forces air through rear A/C–heater registers.
M267 Auxiliary blower motor 151–49
1 C4106
261 10 OG/BK
30
85 C4118
When energized, relay contact closes completing circuit for blower motor operation.
K235 Rear A/C blower speed relay 2 151–49
87a
87
86 C4118
57 10 BK
753 18 YE/RD
S401
515 12 OG/RD
3 C405
See page 10–13
4 C4107
R86 Auxiliary blower motor resistor assembly 151–49
2.7Ω +/– 10%
.8Ω +/– 10%
.25Ω +/– 10%
2 755 11
1 16 BN/WH752 5
14 YE/RD
3 751 9
C4107
12 DB/WH
C405
Z
Y
X
See page 54–5
G400
See page 54–5
Limits speed of blower motor so that it operates at LOW, MED LOW, and MED HIGH speeds.