C1045 (GY)

* 4.2L, 4.6L

9D930/12B637

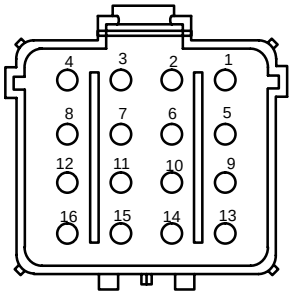

F16034

(1) 315 (VT/OG)
(2) 237 (OG/YE)
(3) 480 (VT/YE)
(4) 923 (OG/BK)
(5) 970 (DG/WH)
*389 (WH/BK)
(6) 199 (LB/YE)
(7) 140 (BK/PK)
(8) 359 (GY/RD)
*390 (TN/YE)
(9) 1093 (TN/RD)
(10) 32 (RD/LB)
(11) 296 (WH/VT)
(12) 136 (DB/YE)
*393 (VT/LG)
(13) 924 (BN/OG)
*136 (DB/YE)
(14) 361 (RD)
(15) 359 (GY/RD)
(16) 925 (WH/YE)

7C078

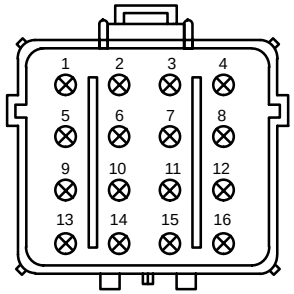

F16087

C1046 (BK)

14B102

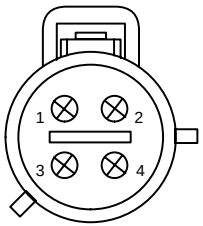

F04263

(1) 1102 (YE/LG)
(2) –

12B637

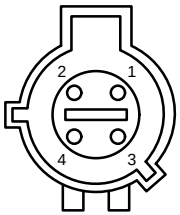

F04082

(3) –
(4) 359 (GY/RD)

C1047 (GY)

7C078

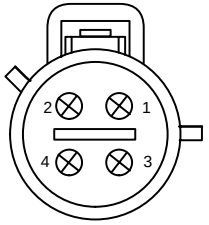

F04269

(1) 359 (GY/RD)
(2) 1145 (LB/BK)

12B637

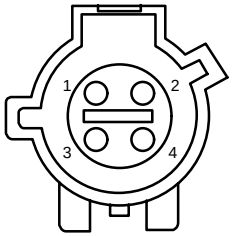

F04371

(3) 1144 (YE/BK)
(4) 1146 (LG/RD)

C1051

* Diesel

12A581

Fuel pump relay

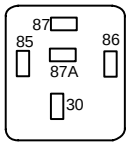

F05147

Pin	Circuit	Circuit function
30	37 (YE)	Voltage supplied at all times (overload protected)
85	926 (LB/OG)	Fuel pump relay, control
86	361 (RD)	Voltage supplied at all times (overload protected)
	*16 (RD/LG)	
87	238 (DG/YE)	Fuel pump relay, switched power, output
87A	–	not used

C1061 (BK)

* 4.2L, 4.6L

12B637/9D930

Engine Coolant Temperature (ECT) sender

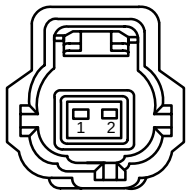

F02200

Pin	Circuit	Circuit function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
	*45 (YE/RD)	Ground
2	45 (YE/RD)	Ground
	*39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input