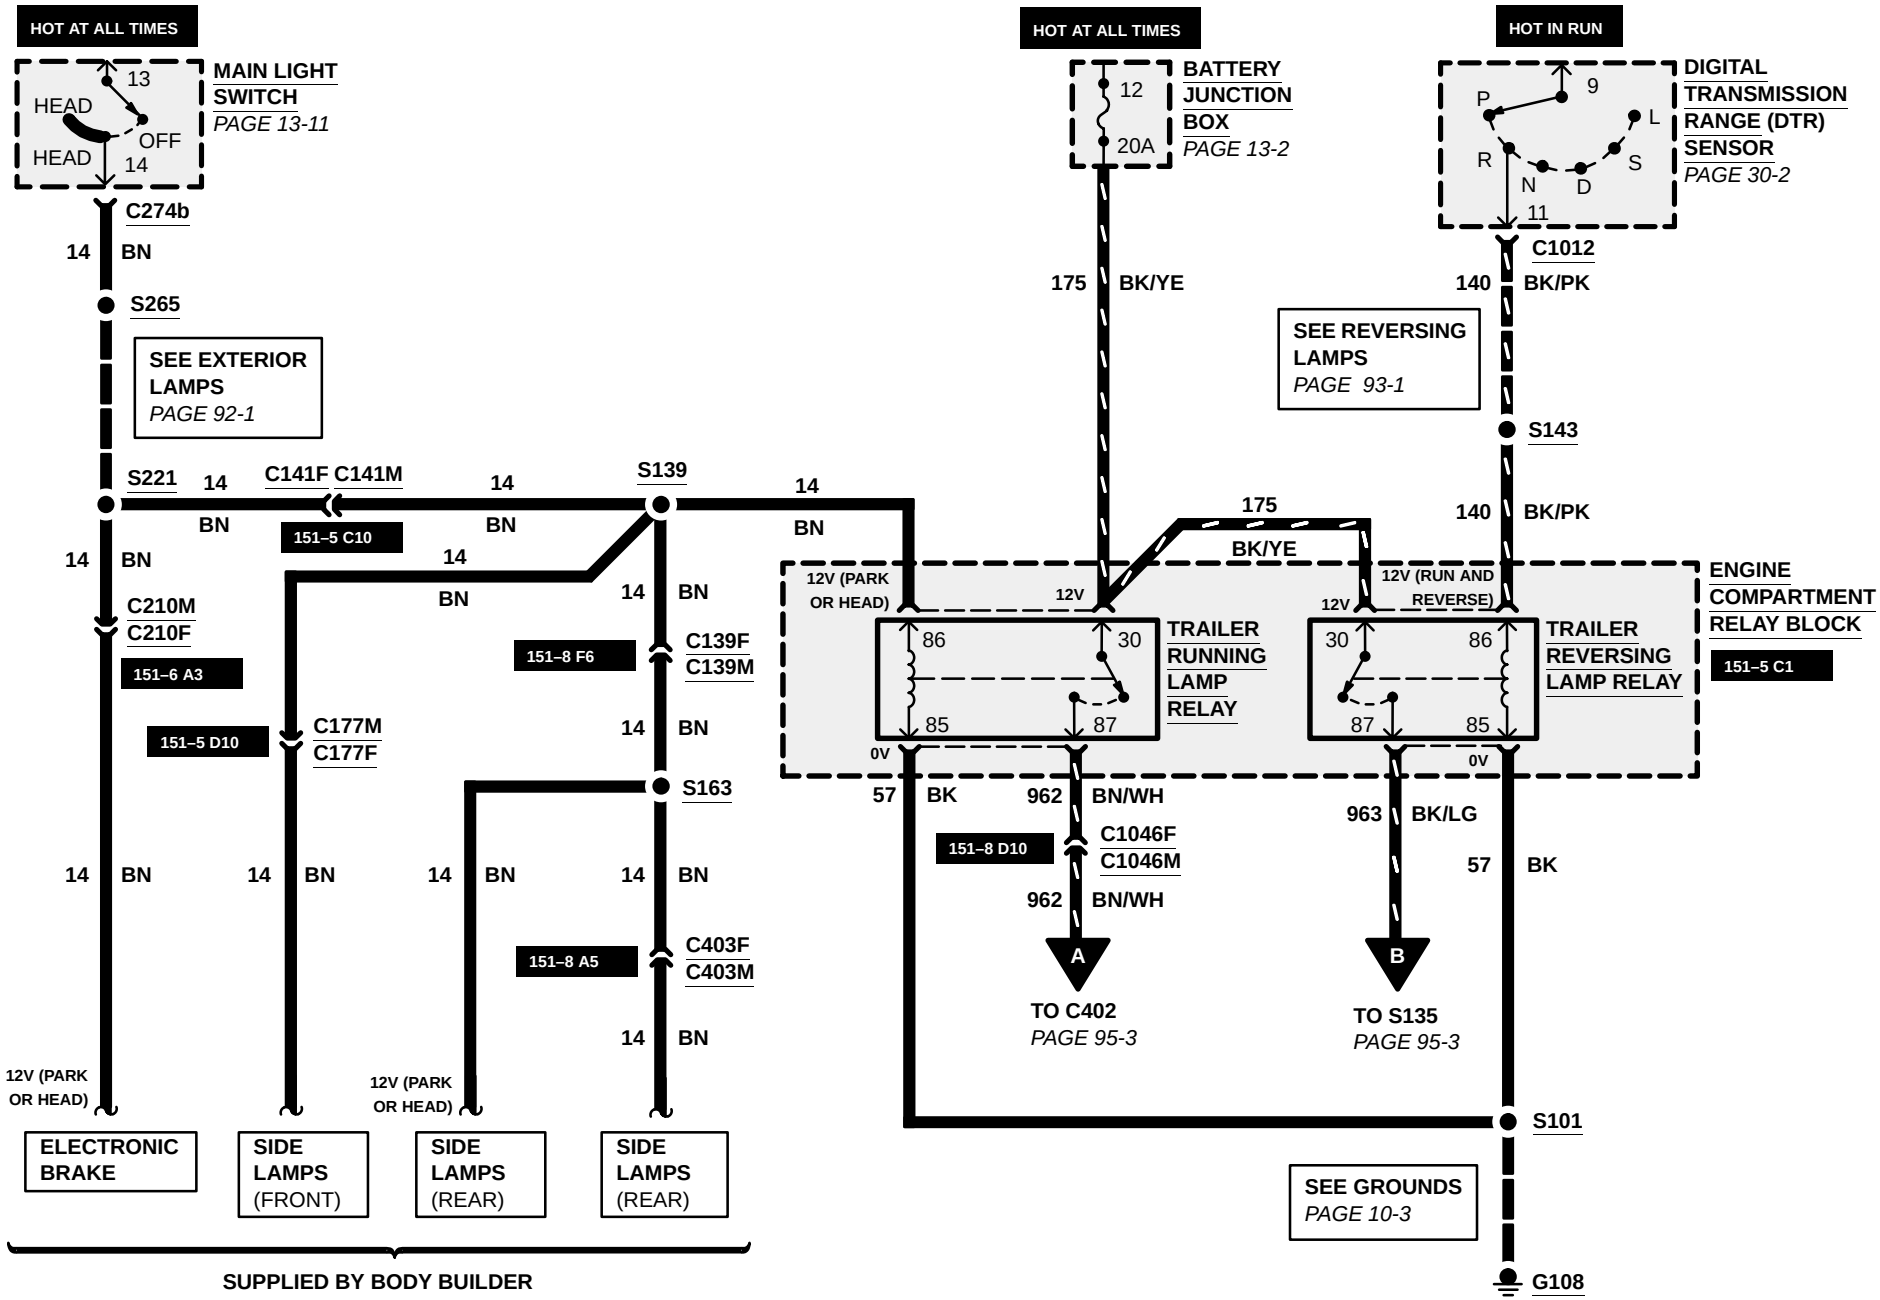
HOT AT ALL TIMES
MAIN LIGHT SWITCH
PAGE 13-11
13
HEAD
OFF
HEAD
14
C274b
14 BN
S265
SEE EXTERIOR LAMPS
PAGE 92-1
S221
14 BN
C141F C141M
14 BN
151–5 C10
S139
14 BN
14 BN
C210M
C210F
151–6 A3
14 BN
151–8 F6
C139F
C139M
151–5 D10
C177M
C177F
14 BN
S163
14 BN
14 BN
14 BN
14 BN
C403F
C403M
151–8 A5
14 BN
12V (PARK OR HEAD)
12V (PARK OR HEAD)
ELECTRONIC BRAKE
SIDE LAMPS (FRONT)
SIDE LAMPS (REAR)
SIDE LAMPS (REAR)
SUPPLIED BY BODY BUILDER
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
12
20A
175 BK/YE
HOT IN RUN
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 30-2
P
R
N
D
S
L
9
11
C1012
140 BK/PK
SEE REVERSING LAMPS
PAGE 93-1
S143
140 BK/PK
175 BK/YE
12V (PARK OR HEAD)
12V
12V (RUN AND REVERSE)
12V
ENGINE COMPARTMENT RELAY BLOCK
151–5 C1
86
30
85
87
TRAILER RUNNING LAMP RELAY
30
86
87
85
TRAILER REVERSING LAMP RELAY
0V
0V
57 BK
962 BN/WH
963 BK/LG
151–8 D10
C1046F
C1046M
962 BN/WH
57 BK
A
B
TO C402
PAGE 95-3
TO S135
PAGE 95-3
S101
SEE GROUNDS
PAGE 10-3
G108