C3076 (GY)

14B079

Video cassette player

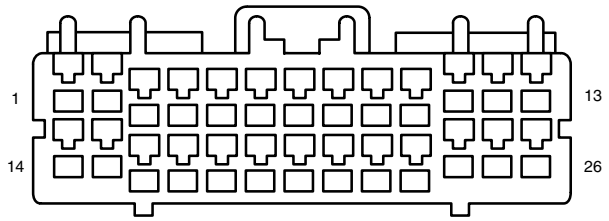

F26009

Pin	Circuit	Circuit function
1	(RD)	Audio signal positive, Left
2	(RD)	Audio signal positive, Right
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	(BK)	Shield
12	(RD)	video +
13	–	not used
14	(BK)	Shield
15	(BK)	Shield
16	–	not used
17	–	not used
18	–	not used
19	–	not used
20	–	not used
21	–	not used
22	–	not used
23	(WH)	Video cassette player, to, Rear Seat Entertainment (RSE) module, signal
24	(BK/LG)	audio ground
25	(LG/VT)	Voltage supplied at all times (overload protected)
26	(BK/PK)	Voltage in Run or Accessory (overload protected)

C3077a

14B079

Rear Seat Entertainment (RSE) module

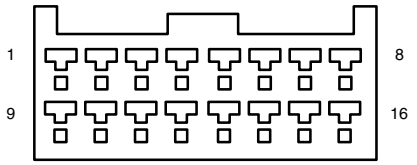

F16037

Pin	Circuit	Circuit function
1	(TN/LG)	Audio signal positive, right rear
2	(OG/RD)	Audio signal positive, right rear
3	(BN/PK)	Audio signal negative, right rear
4	–	not used
5	(TN/YE)	Audio signal negative, left rear
6	(GY/LB)	Audio signal positive, left rear
7	(TN/WH)	Audio signal positive, left rear
8	(BK/LG)	audio ground
9	(LG/BK)	Audio System ON (ASYSON)
10	(LG/VT)	Voltage supplied at all times (overload protected)
11	(BK)	audio/video ground
12	(LB/PK)	Audio corporate protocol A
13	(TN)	Audio corporate protocol B
14	(WH)	Video cassette player, to, Rear Seat Entertainment (RSE) module, signal
15	(BK)	Ground, Illumination
16	(LB/RD)	Illumination, feed