## Relay – Mini ISO

### Schematic

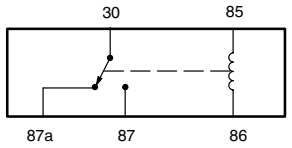


### Terminals

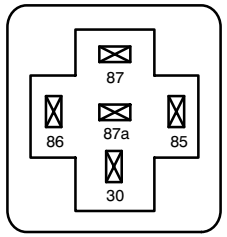


F05137

### Component testing procedure (no voltage applied)

| Circuit to test | Connect ohmmeter to terminals | A good relay will indicate |
|---|---|---|
| **Coil** | 85 and 86 | 50–100Ω |
| **Contact** | 30 and 87a | Closed circuit |
| | 30 and 87 | Open circuit |
| **Coil – Contact** | 86 and 30 | Open circuit |
| | 86 and 87a | Open circuit |
| | 86 and 87 | Open circuit |

### Component testing procedure (voltage applied)

Disconnect the ohmmeter; connect pins 30 and 85 to 12V DC power and pin 86 to ground. Measure voltage between pin 87 and pin 86. If the voltage is 12V, continue with the test. If not, replace the relay. Disconnect power from pin 85 and measure voltage between pin 87a and pin 86. If the voltage is 12V, the relay is okay. If not, replace the relay.