C175

12A522

A147
Powertrain Control
Module (PCM)

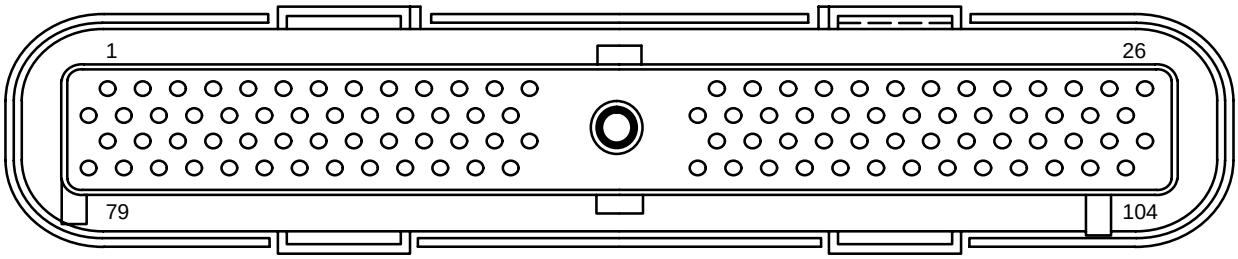

F104001

Pin	Circuit	Circuit Function
1	1028 (WH/PK)	Coil On Plug (COP) 4, control - Duratec
	315 (VT/OG)	Shift solenoid B - ZETEC
2	-	not used
3	1202 (BN/LG)	Output shaft speed sensor (OSS), signal, return
4	-	not used
5	-	not used
6	237 (OG/YE)	Shift solenoid A - Duratec
7	-	not used
8	-	not used
9	-	not used
10	-	not used
11	315 (VT/OG)	Shift solenoid B - Duratec
12	-	not used
13	107 (VT)	Flash EEPROM power supply
14	-	not used
15	915 (PK/LB)	SCP Bus -
16	914 (TN/OG)	SCP Bus +
17	168 (RD/BK)	RX, signal - Duratec
	228 (DB)	High speed fan control relay 1, control - ZETEC
18	167 (BN/OG)	TX, signal - Duratec
19	167 (BN/OG)	TX, signal - ZETEC
20	971 (PK/BK)	3–2T/CCS, signal - Duratec
	557 (BN/OG)	Fuel injector 3, control
21	138 (BK/PK)	Powertrain Control Module (PCM) - Crankshaft position sensor +
22	139 (GY/YE)	Powertrain Control Module (PCM) - Crankshaft position sensor -
23	1202 (BN/LG)	signal, return
24	57 (BK)	Ground
25	570 (BK/WH)	Ground

Pin	Circuit	Circuit Function
26	1024 (LG/WH)	Coil On Plug (COP) 1, control - Duratec
	1030 (DG/VT)	Ignition coil - ZETEC
27	1026 (PK/WH)	Coil On Plug (COP) 5, control - Duratec
	325 (DB/OG)	Starter relay, control - ZETEC, Manual Duratec
28	288 (DB)	Low speed fan control relay, control - Duratec
	679 (GY/BK)	Vehicle Speed Sensor (VSS) + - ZETEC
29	665 (OG/YE)	Overdrive cancel switch, signal
30	-	not used
31	330 (YE/LG)	Power steering pressure switch, input
32	311 (DG/VT)	Knock sensor - Duratec
33	1202 (BN/LG)	Ground
34	20 (WH/LB)	Turbine shaft speed (TSS) sensor - ZETEC
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12, input
36	968 (TN/LB)	Mass Air Flow (MAF) sensor, signal, return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
38	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor, input - Duratec
	354 (LG/RD)	Cylinder head temperature sensor, input - ZETEC
39	470 (PK/BK)	Sensor signal return (reference/ground)
40	238 (DG/YE)	Fuel pump relay, switched power, output
41	198 (DG/OG)	Dual pressure switch, signal
42	3886 (DB/YE)	Medium speed fan control relay, control - Duratec
43	3886 (DB/YE)	Medium speed fan control relay, control - ZETEC

Pin	Circuit	Circuit Function
44	325 (DB/OG)	Starter relay, control - Duratec, Automatic
45	-	not used
46	386 (LB)	High speed fan control relay 1, control - Duratec
47	585 (VT)	EGR vacuum regulator solenoid valve, control - Duratec
48	-	not used
49	-	not used
50	-	not used
51	57 (BK)	Ground
52	1030 (DG/VT)	Coil On Plug (COP) 2, control - Duratec
	1024 (LG/WH)	Ignition coil - ZETEC
53	1021 (LG/YE)	Coil On Plug (COP) 6, control - Duratec
	168 (RD/BK)	RX, control - ZETEC
54	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid - Duratec
	926 (LB/OG)	Fuel pump relay, control - ZETEC
55	16 (RD/LG)	Voltage supplied at all times (overload protected)
56	191 (LG/BK)	Powertrain Control Module (PCM), Vapor management valve
57	310 (YE/RD)	Knock sensor
58	136 (DB/YE)	Output shaft speed sensor (OSS) - ZETEC, Automatic
	136 (DB/YE)	Vehicle Speed Sensor (VSS) - ZETEC, Manual
59	20 (WH/LB)	Turbine shaft speed (TSS) sensor - Duratec
	921 (GY/OG)	Generator, to, Powertrain Control Module (PCM) - ZETEC
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11, input
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22, input
62	791 (RD/PK)	Fuel tank pressure transducer sensor
63	-	not used
64	199 (LB/YE)	Transmission Range (TR) sensor Powertrain Control Module (PCM) - Automatic
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
66	-	not used
67	91 (VT/WH)	Canister vent

Pin	Circuit	Circuit Function
68	679 (GY/BK)	Powertrain Control Module (PCM), signal - Duratec
	386 (LB)	Low speed fan control relay, control - ZETEC
69	331 (PK/YE)	A/C clutch relay, control
70	555 (TN)	Fuel injector 1, control - ZETEC
71	100 (WH/RD)	PCM power relay, output
72	920 (BN/WH)	Generator, to, Powertrain Control Module (PCM)
73	559 (TN/BK)	Fuel injector 5, control - Duratec
	237 (OG/YE)	Shift solenoid A - ZETEC
74	557 (BN/YE)	Fuel injector 3, control - Duratec
75	555 (TN)	Fuel injector 1, control - Duratec
76	57 (BK)	Ground
77	57 (BK)	Ground
78	1025 (OG/YE)	Coil On Plug (COP) 3, control - Duratec
79	585 (VT)	EGR vacuum regulator solenoid valve, control - ZETEC
80	926 (LB/OG)	Fuel pump relay, control - Duratec
81	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid
82	-	not used
83	264 (WH/LB)	Idle air control valve (IAC), control
84	136 (DB/YE)	Output shaft speed sensor (OSS) – Duratec, Automatic
	136 (DB/YE)	Vehicle Speed Sensor (VSS) - Duratec, Manual
85	282 (DB/OG)	Camshaft position sensor, input
86	347 (BK/YE)	Dual pressure switch, signal
87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21, input
	311 (DG/VT)	Knock sensor - ZETEC
88	967 (LB/RD)	Mass Air Flow (MAF) sensor, output
89	355 (GY/WH)	Throttle Position Sensor (TPS), input
90	351 (BN/WH)	Reference, voltage
91	89 (OG)	signal, return
92	511 (LG)	Brake pedal position switch, to stoplamps
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11, heater

Pin	Circuit	Circuit Function
94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21, heater - Duratec
95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12, heater - Duratec
	558 (BN/LB)	Fuel injector 4, control - ZE-TEC
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22, heater - Duratec
	556 (WH)	Fuel injector 2, control - ZE-TEC
97	100 (WH/RD)	PCM power relay, output
98	-	not used
99	560 (LG/OG)	Fuel injector 6, control - Dura-tec
	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid - ZETEC
100	558 (BN/LB)	Fuel injector 4, control - Dura-tec
	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12, heater - ZETEC
101	556 (WH)	Fuel injector 2, control - Dura-tec
102	971 (PK/BK)	3–2T/CCS, signal - ZETEC
103	57 (BK)	Ground
104	-	not used