*** 4.6L 2V
†† 4.6L 4V

C118 (BK)

12B637

Coil On Plug (COP) 8 (12A366)

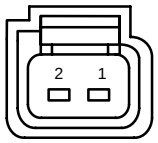

F02645

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1029 (WH/RD)	coil driver (CD) – H control
2	***1029 (WH/RD)	coil driver (CD) – H control
	††1118 (RD)	PCM power relay, output

C122 (BK)

14290

Speed control servo (9C735)

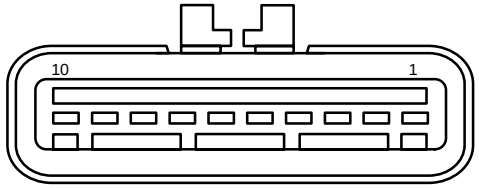

F10113

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	239 (WH/OG)	Vehicle Speed Sensor (VSS), +
4	511 (LG)	Hot with BPP switch engaged
5	151 (LB/BK)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	294 (WH/LB)	Voltage in Run (overload protected)
8	–	not used
9	636 (OG)	Deactivator switch signal
10	1205 (BK)	Ground

C123 (BK)

12A581

EVAP canister purge valve

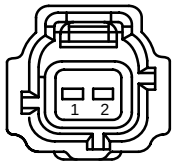

F02105

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	EVAP canister purge valve control

C124 (BK)

14A005

Brake fluid level switch (2L414)

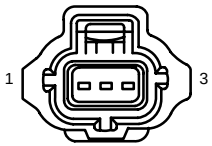

F03247

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	128 (VT/YE)	Brake indicator, control

C125 (BK)

14A005

Windshield wiper motor (17508)

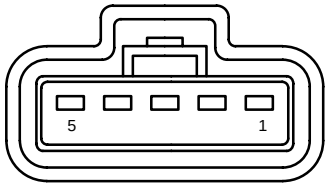

F05119

Pin	Circuit	Circuit function
1	58 (WH)	Wiper high/low relay, switched power, output, High
2	56 (DB/OG)	Wiper high/low relay, switched power, output, Low
3	1205 (BK)	Ground
4	65 (DG)	Voltage in Run or Accessory (overload protected)
5	28 (BK/PK)	Windshield wiper motor (17508), position, signal